

FIREBIRD



HEATING SOLUTIONS

ENVIROMAX

CONDENSING BOILERS

TECHNICAL MANUAL

Heatpac • Slimline Heatpac • Popular • Kitchen



This manual must remain with the householder once installation is complete

Working towards a greener planet

FOREWORD

We would like to thank you for purchasing a high efficiency Firebird condensing oil boiler. This instruction manual is produced for the reference and guidance of qualified installation engineers, preferably OFTEC (Oil Firing Technical Association) registered. EU legislation governs the manufacture, operation and efficiency of all domestic central heating oil boilers. Our boilers and burners are supplied as matched units.

	PAGE
1. SAFETY	2
2. HOUSEHOLDER INSTRUCTIONS	
2.1 Operating Procedure - Heatpac, Slimline Heatpac, Popular & Kitchen	3
2.2 Kitchen - Electronic Controller	4
3. STANDARDS & REGULATIONS	5
4. INSTALLATION	
4.1 Boiler	6
4.2 Condensate Disposal	7
4.3 Flue Regulations	10
4.4 Flap Valve	13
4.5 Flue Systems	14
4.6 Oil Supply	16
5. COMMISSIONING	17
6. SERVICING	18
7. TECHNICAL DETAILS & DIMENSIONS	
7.1 Heatpac	19
7.2 Slimline Heatpac	20
7.3 Popular	21
7.4 Kitchen	22
8. PARTS	
8.1 Heatpac	23
8.2 Slimline Heatpac	24
8.3 Popular	25
8.4 Kitchen	26
9. WIRING	
9.1 Heatpac	27
9.2 Slimline Heatpac	28
9.3 Popular	29
9.4 Kitchen	30
9.5 Kitchen - Electronic Controller	31
10. BURNER	32
11. TERMS & CONDITIONS OF WARRANTY	33
12. PRODUCT FICHE	34

HEALTH & SAFETY INFORMATION

The installer should be aware of his/her responsibilities under the current, local Health and Safety at Work Act. The interests of safety are best served if the boiler is installed and commissioned by a competent, qualified engineer, OFTEC trained and registered. If not, a Building Notice is required in England & Wales. Other parts of the British Isles, including the Channel Islands, also require notification to building control.

Under the Consumer Protection Act 1987 (UK), section 6 of the Health and Safety Act 1974 (UK) and the Safety, Health and Welfare at Work Act 2005 (ROI), we are required to provide information on substances hazardous to health.

INSULATION AND SEALS

Ceramic Fibre, Alumino - Silicone Fibre material are used for boards, ropes and gaskets. Known hazards are that people may suffer reddening and itching of the skin. Fibre entering the eye will cause foreign body irritation. It may also cause irritation to the respiratory tract.

Precautions should be taken by people with a history of skin complaints or who may be particularly susceptible to irritation. High dust levels are only likely to arise following harsh abrasion. Suitable personal protective equipment should be worn where appropriate.

Generally, normal handling and use will not give discomfort. Follow good hygiene practices, wash hands before consuming food, drink or using the toilet.

First Aid - medical attention should be sought following eye contact or prolonged reddening of the skin.

The small quantities of adhesives and sealants used in the product are cured. They present no known hazards when used in the manner for which they are intended.

THIS PRODUCT HAS BEEN DESIGNED TO THE FOLLOWING STANDARDS:

This equipment complies with the Low Voltage Directive 2006/95/EC & the EMC Directive 2004/108/EC.

EMC - conformity was demonstrated by meeting the following standards:

EN 55014-1: 2006/A2: 2011: Electromagnetic Compatibility - Requirements for Household Appliances, Electric Tools and Similar Apparatus - Part 1: Emission

EN 55014-2: 1997/A2: 2008: Electromagnetic Compatibility - Requirements for Household Appliances, Electric Tools and Similar Apparatus - Part 2: Immunity - Product Family Standard

EN 61000-3-2: 2009: Electromagnetic Compatibility (EMC) Part 3-2: Limits - Limits for Harmonic Current Emissions (equipment input current <16 A per phase)

EN 61000-3-3: 2008: Electromagnetic Compatibility (EMC) Part 3-3: Limits - Limitation of Voltage Changes, Voltage Fluctuations and Flicker in Public Low-voltage Supply Systems (equipment with rated current <16 A per phase and not subject to conditional connection)

Safety - conformity was demonstrated by meeting the following standards:

EN60335-1: 2012: Household and Similar Electrical Appliances - Safety - Part 1: General Requirements

EN60335-2-102: 2006/A1: 2010: Household and Similar Electrical Appliances - Safety - Part 2-102: Particular Requirements for Gas, Oil and Solid-fuel Burning Appliances having Electrical Connections

SAFETY

Safe use of Kerosene. These fuels give off a flammable vapour when heated moderately. Vapour ignites easily, burns intensely and may cause explosion. The vapour can follow along at ground level for considerable distances from open containers and spillages collecting as an explosive mixture in drains, cellars, etc.

Fuels remove natural oils and fats from the skin and this may cause irritation and cracking of skin. Barrier cream containing lanolin is highly recommended together with good personal hygiene and where necessary appropriate personal protection equipment (P.P.E.).

Gas oil may also cause irreversible damage to health on prolonged or repeated skin contact.

Always store fuels in a properly constructed and labelled tank. Always handle fuel in open air or well ventilated space away from sources of ignition and refrain from smoking.

Always drain fuel using a proper fuel retriever, funnel or mechanical siphon. Never apply heat to a fuel tank, container or pipework. Never siphon fuel through tube by mouth. Avoid inhaling fuel vapour as this can cause light headedness and seriously impair judgement.

FUEL SPILLAGE

1. Switch off all electrical and other ignition sources.
2. Remove all contaminated clothing to safeguard against fire risk and skin damage. Wash affected skin thoroughly with soap and water and remove clothing to a safe well ventilated area and allow to air before cleaning.
3. Contain and smother the spill using sand or other suitable oil absorbent media or non-combustible material.
4. Do not allow fuel to escape into drains or water courses. If this happens, contact the relevant authorities in your area (Ireland).
5. Consult local authority about disposal of contaminated soil.

FIRST AID

If fuel is accidentally swallowed:


* Seek medical attention immediately.

Do **NOT** induce vomiting.

If fuel is splashed into eyes:

* Wash out with running water for at least ten minutes and seek medical attention.

HEATPAC SLIMLINE HEATPAC POPULAR KITCHEN

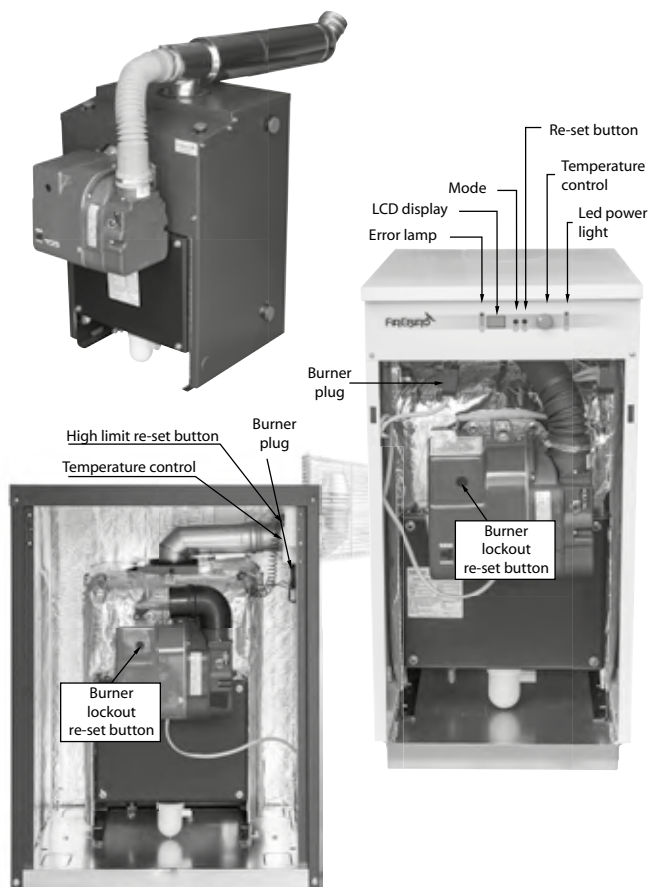

To start the boiler:

- Turn on fuel supply.
- Switch on power supply to boiler.
- Turn timer control (if fitted) to "ON".
- Set the boiler thermostat to the required temperature. The boiler thermostat controls the boiler operation by automatically maintaining the required boiler water temperature output. Safe operation is also maintained by the burner control system which provides the required ignition and shut off sequence. If the optional timer control is fitted, this will automatically switch the boiler off and on when heat is required.

To turn off the boiler:

- Turn the timer control (if fitted) to "OFF".
- Turn off the mains electrical supply to the boiler.

Operational status lights not included in Popular and Heatpac models.

Thermostat Control



Set at Max. 80°C



Set at Mid. 70°C



Set at Min. 60°C

Burner Lockout

The boiler is factory fitted with a burner control box lockout safety feature which operates automatically if a fault occurs in the burner operation. Should this occur, the light on the front of the burner will illuminate.

This could be caused by:

- A. An interruption in the fuel supply (eg. empty oil supply tank).
- B. An electrical supply fault.
- C. A fault with the burner or its safety control system.
- D. The failure of a burner component.
- E. Worn or dirty oil nozzle.
- F. Incorrect flue installation.

Before attempting to restart the boiler, the front panel and the burner cover should be removed and a visual check made for any obvious problems such as oil leaks, loose connections etc.


**ENSURE OIL TANK CONTAINS
KEROSENE 28 SECOND CLASS C FUEL**

To restart the boiler:

1. Press reset button.
2. Ensure that the boiler thermostat, time switch (if fitted) and any external controls connected to the boiler are set to call for heat.
3. Check that the oil supply valves are open and that there is sufficient oil in the tank.
4. Check that the main power supply is on. The boiler is now ready.

2 2.2 KITCHEN ELECTRONIC CONTROLLER - HOUSEHOLDER INSTRUCTIONS

This controller has a number of new features as standard, these include: anti-cycling, frost protection, on/off switch option, hours of operation records, system pressure display, pump over-run and liquid-crystal display (LCD). The LCD shows key boiler information and error codes. This controller can work with and be controlled by room thermostats, timers or heat demand switches.

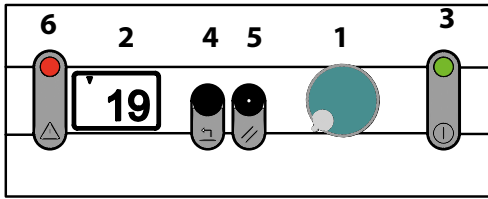

CONTROL PANEL


1. Temperature control knob.
2. LCD.
3. Power green light. Lights green when power to the panel.
4. Mode button (for scrolling through the display options on the LCD).
5. Re-set button.
6. Error red light.

TO START THE BOILER:

- Turn fuel supply on.
- Switch power supply to boiler on.
- The green led will light up and the LCD will show the set temperature or "off".
- If "off" appears on the LCD, press the mode button "4" and hold for 6 seconds until the set temperature appears on the led.
- Turn on the timer or heat demand switch, i.e. room stat.
- Turn the temperature dial clockwise to increase temperature. The set temperature displayed on the LCD will increase. Temperature range - min. 60°C to max. 85°C.


TO TURN THE BOILER OFF:

- Press button 4 and hold for 6 seconds until "off" appears on the LCD.
- Switch the timer or heat demand off.
- Turn off the mains electrical supply.

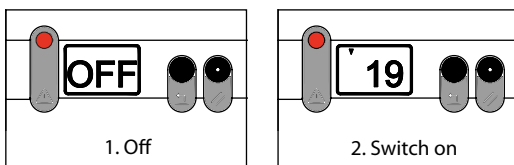


CONTROL PANEL FUNCTIONS

The LCD displays the boiler set temperature, actual boiler temperature, hours of operation, system pressure (if a pressure sensor is fitted) and program number. The different displays are accessed by pressing the mode button "4" on the panel.


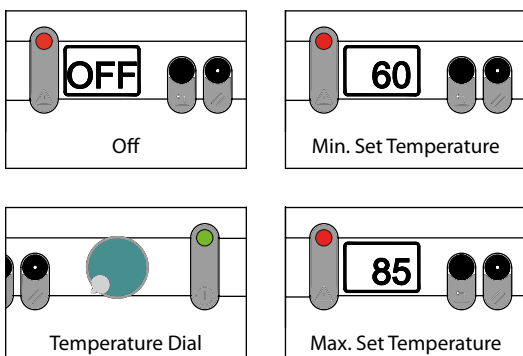


MODE BUTTON & LCD

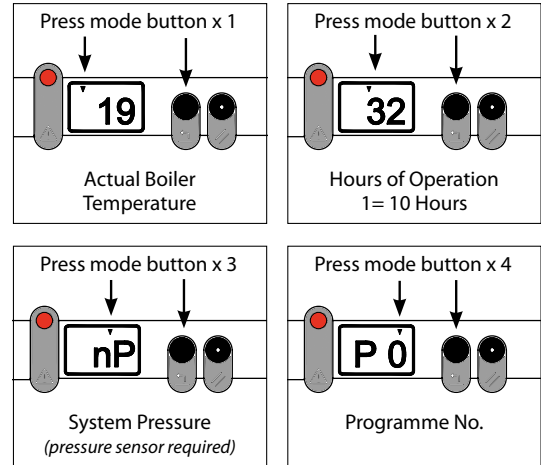

ERROR DISPLAY AND RE-SET

Warning: Should an error appear on the control panel display, consult your service engineer or the Firebird technical department before attempting to re-set the error.

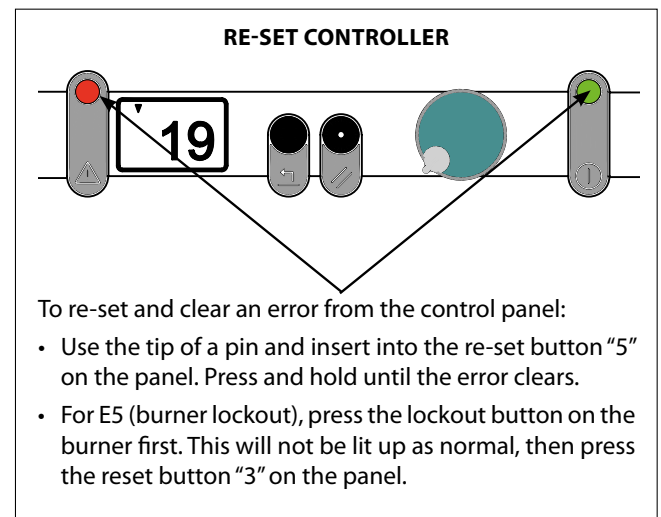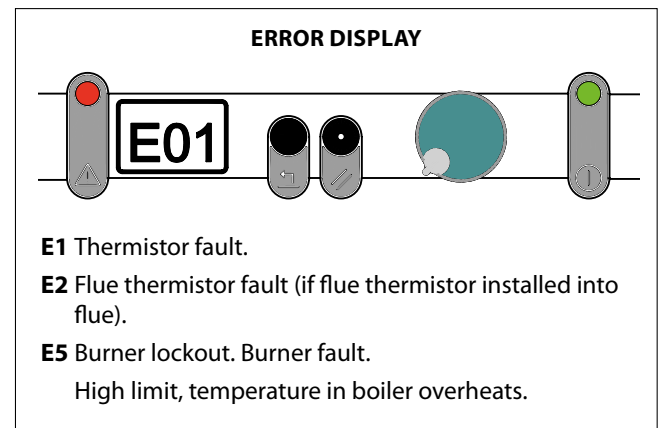

3 STANDARDS & REGULATIONS

To ensure the highest standards of installation & safety, it is important that the boiler be installed in compliance with the following regulations where applicable. It is the responsibility of the installer and everyone concerned with any aspect of installation, to ensure that all applicable standards and regulations are fully adhered to.

The following is a list of some of the applicable standards and regulations. Please always check for the most up to date version.

Part L & J	Ireland, United Kingdom and Northern Ireland
Part F	Section III Scotland - Conservation of Fuel Power
BS 5410	Part 1: 2014 - Code of Practice for Oil Firing - Installation up to 44kW Part 2: 2013 - Code of Practice for Oil Firing - Installation for 44kW and greater
BS 799	Part 5: 2010 - Specification for Oil Storage Tanks
BS 4876: 1984	Performance Requirements for Oil Burning Appliances
BS EN 12828: 2012 + A1: 2014.	(UK National Annex) - Heating Systems in Buildings - Design for Water Based Heating Systems
BS 7074	Part 1: 1989 - Application, Selection and Installation of Expansion Vessels and Ancillary Equipment for Sealed Water Systems
BS 7593: 2006	Code of Practice for Treatment of Water in Heating Systems
BS 715: 1989	Metal Flue Pipes, Fittings, Terminals and Accessories
BS 1181: 1989	Clay Flue Linings and Flue Terminals
BS 4543	Part 3: 1990 - Factory made Insulated Chimneys for Oil Fired Appliances
BS 8558	Design, Installation, Testing and Maintenance of Services Supplying Water
BS 7671	Current IEE Regulations - Requirements for Electrical Regulations Local Water Undertaking Bylaws - Water Supply (Water Fittings) Regulations 1999 - The Control of Pollution (Oil) Regulations
BS EN 304: 1992	Heating Boilers. Test Code for Heating Boilers for Atomizing Oil Burners

In addition, the work must comply with relevant building regulations for oil fired boilers and oil storage tanks.

OFTEC also publish excellent guides including: Safe Working Practices for Oil Fired Technicians - OFTEC Technical Book Three (Installation Requirements for Oil Fired Boilers and Oil Storage Tanks) - OFTEC Technical Book Four (Domestic Heating Systems) and it is recommended that these should adhere to Domestic Heating Design Guide.

COPIES OF BRITISH STANDARDS MAY BE PURCHASED DIRECT FROM:

**BSI (Customer Services),
389 Chiswick High Rd., London W4 4AL.
Tel.: +44(0)845 0869001 Fax: +44(0)208 9967001**
International and EC Standards are also available from above.

OFTEC PUBLICATIONS ARE AVAILABLE FROM:
**OFTEC, Oil Firing Technical Association,
Foxwood House, Dobbs Lane,
Kesgrave, Ipswich, IP5 2QQ.
www.oftec.org**

BOILER INSTALLATION:

Other than special considerations for condensate removal and plume dispersal, the installation of oil fired condensing boilers is the same as for non-condensing oil fired boilers.

BS5410 - Part 1: 2014 gives the requirements for domestic boiler and oil storage installations.

If an appliance is to be installed inside a building or within a restricted area externally, a carbon monoxide detector alarm conforming to EN 50291 should be installed in accordance with the manufacturer's instructions.

For condensing boilers, the same requirements apply for installation with regard to cleaning and flushing and providing inhibitors, as are followed for any other boiler. Manufacturer's instructions must always be followed together with the requirements of EN 12828: 2012 + A1: 2014 & BS EN 12831: 2003 and the statutory requirements of the Building Regulations.

4 4.1 - INSTALLATION - BOILER

Please note following important points before commencing installation:

INSTALLATION & COMMISSIONING

Boilers must be installed, commissioned and serviced by an OFTEC registered, competent, qualified engineer and as set out in the installation manual, using correct test equipment.

WARNING

The manufacturer cannot accept responsibility for any damage to persons, animals or property due to error in installation or in the burner adjustment or due to improper or unreasonable use or non observance of the technical instruction enclosed with the burner, or due to the intervention of unqualified personnel.

POSITIONING THE BOILER

Compliance guide to part L now states that when installing a boiler on a new or existing system, the system should be cleaned, flushed and then protected with a suitable protection inhibitor

Ensure that adequate clearance is available for making the water and flue connections.

The boiler is serviced from the front and a clearance of 750mm must be available at the front of the boiler.

No special hearth is required as the boiler is fully insulated, but the floor must be level and capable of supporting the weight of the boiler and its water content.

Sound levels must also be a consideration. Whilst Firebird condensing oil boilers are one of the quietest boilers on the market, some householders are particularly sensitive.

A suitable corrosion inhibitor must be added to the heating system.

UNDERFLOOR HEATING

The boiler should not be directly connected to underfloor heating, as a minimum return temperature of 37°C is required (it can be used with underfloor heating with adequate temperature controls to ensure return values are as stated above).

INHIBITOR

Once the initial fill has been completed, ensure adequate inhibitor is added to protect the boiler and system from corrosion.

PLASTIC PIPING - WARNING

The boiler thermostat control and safety system is not designed, and must not be relied on, to protect plastic pipe from overheating. Plastic pipe must never be connected directly to the boiler and there must be at least 1 meter of copper pipe between the boiler and the first plastic connection. If you choose to use plastic pipe anywhere on your heating circuits, please consult the plastic pipe manufacturer for their instructions on how to ensure their product never overheats. Our boiler control and safety high limit thermostats are not designed to fulfil this function. **Firebird accepts no responsibility for failure of plastic piping and fittings for whatever reason.**

MAGNETIC FILTRATION

It is recommended at the time of installation of this boiler, to install a permanent effective magnetic filter on the return pipework after the last radiator on the central heating system. This will maintain maximum operational efficiency and protect the boiler from the damaging, long-term effects of "magnetite" (black iron sludge). It is essential that the filter is sized similar to the return pipework e.g. 22mm (¾") or 28mm (1"). In all circumstances, an effective magnetic filter must be installed in

accordance with the manufacturer's instructions and serviced annually.

BOILER THERMOSTAT / THERMISTOR FUNCTION

The control thermostat on the boiler allows the householder to vary temperature to central heating from a low of 60°C to a high of 80°C, depending on the model. Thermostats have a tolerance of ±4°C.

In accordance with EU boiler standards, your boiler is also fitted with a safety high limit thermostat, fixed at 110°C. This system protects the boiler in the event of the control thermostat failing and keeps the boiler safe.

The safety high limit thermostat will shut the boiler off and will require the limit button to be pushed to restart the boiler. If the problem re-occurs, you should call your service engineer.

In cases where the flow from the boiler is down to the heating system, fitting a pump over run thermostat (a pipe stat) is recommended. This is to prevent the residual heat build up in the boiler from unnecessarily activating the high limit thermostat and thus causing nuisance. See Heatpac wiring diagram.

Firebird Kitchen and Heatpac models are factory fitted with an over run thermostat pump.

TIME AND TEMPERATURE CONTROLS

The Building Regulations state that central heating systems must have time and temperature control on the pipe circuits (eg. thermostatic radiator valves / TRVs, room thermostats, cylinder thermostats etc.).

BURNER

The burner is factory set for use with Kerosene 28 Second Class C fuel.

ROOM SEALED BALANCED FLUES

BS 5410 Part 1: 2014 - Code of Practice for Oil Firing - Installation up to 44kW Output Capacity for Space Heating and Hot Water Supply Purposes - Paragraph 12.2 Mounting.

The flue terminal should be mounted so that it is separated from any combustible material forming a part of the building.

Such combustible material may take the form of cladding on the surface of a non-combustible wall through which the flue outlet passes. In such a case, the cladding adjacent to the flue outlet should be replaced by non-combustible material extending not less than 50mm beyond the outside dimensions of the flue outlet.

The wall through which the flue outlet passes may itself be of combustible material, and if so the flue outlet, where it passes through the wall, should be surrounded by non-combustible insulating material not less than 50mm thick (see next page). The insulating material itself should be contained in a steel liner to provide the necessary structural rigidity and to prevent moisture reaching the insulating material.

PRESSURISED HEATING SYSTEM

Firebird recommends that a pressure switch is fitted to all pressurised heating systems to prevent the burner firing should the system pressure drop.

If fitted to a pressurised heating system, then adequate expansion provision must be made to prevent damage to the heating system and boiler."

For further information, consult appropriate training manuals and BS 7074 Part 1, EN 12828: 2003 etc.

4 4.2 - INSTALLATION - CONDENSATE DISPOSAL

Firebird condensing boilers, when in condensing mode, extract more heat from the flue products and the resulting condensate which is mildly acidic, needs to be drained from the boiler via a condensate pipe to the drainage system.

Provision must be made for the removal of condensate from the boiler to an internal soil stack, waste pipe, external soil stack, gully or soak-away, as per BS 6798: 2014.

The condensate trap is provided with the boiler and situated on the front of the boiler (under the cleaning door). This should be checked at regular intervals and cleaned during annual service.

The condensate line should:

- be plastic and have a minimum diameter of 22mm dia.;
- have a fall from the boiler of 1:100 minimum;
- have as few bends as possible to reduce the risk of trapping condensate.

Copper or steel cannot be used.

CONDENSATE PIPEWORK THAT IS EXTERNAL OR IN AN UNHEATED GARAGE SHOULD NOT EXCEED 3 METERS AND SHOULD BE LAGGED WITH WATER PROOF INSULATION TO PREVENT FREEZING.


SYSTEM NO. 1 CONDENSATE TRAP





Always prime condensate trap with water.

Condensate baffle and condensate trap

Before switching on your Firebird condensing oil boiler check that:


- (1) The float & condensate drain baffle are in place.
- (2) That the condensate trap is primed.
- (3) The condensate discharge pipe is a corrosion resistant pipe.

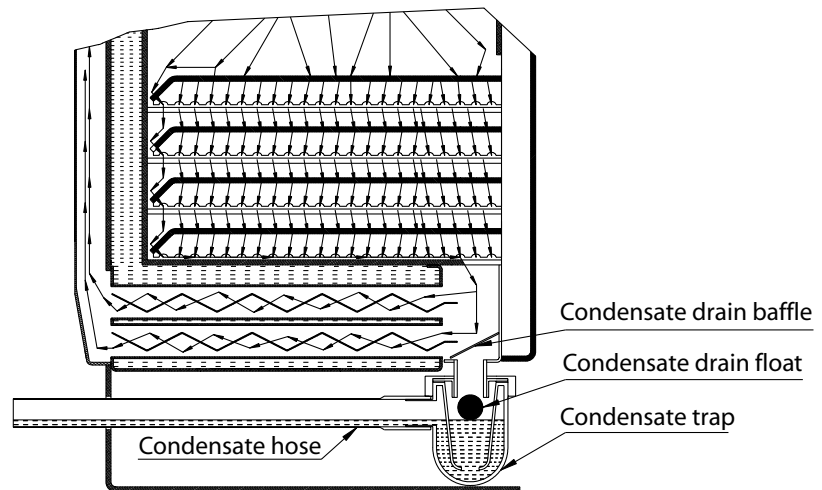

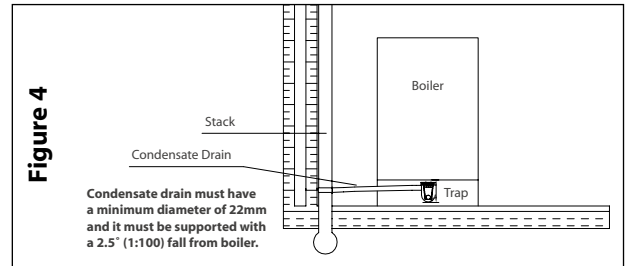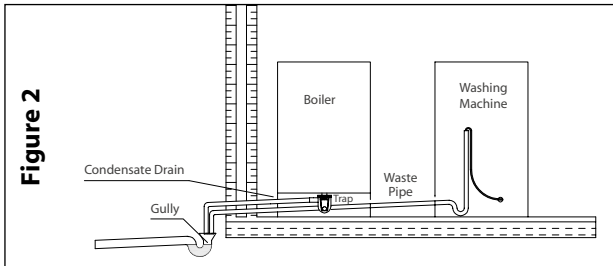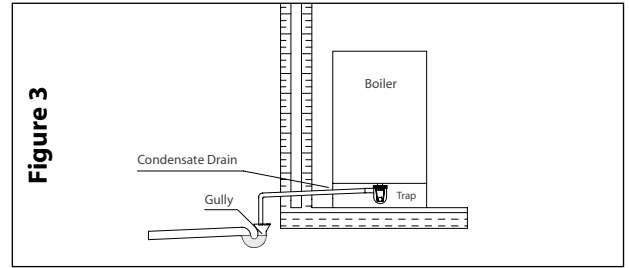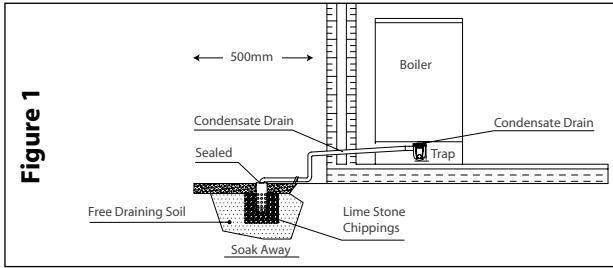


Ensure that the boiler combustion chamber cannot be filled through the condensate trap from another appliance (eg. washing machine) which is drained at a higher level (see Figure 2).

SYSTEM NO. 2 - CONDENSATE PUMP

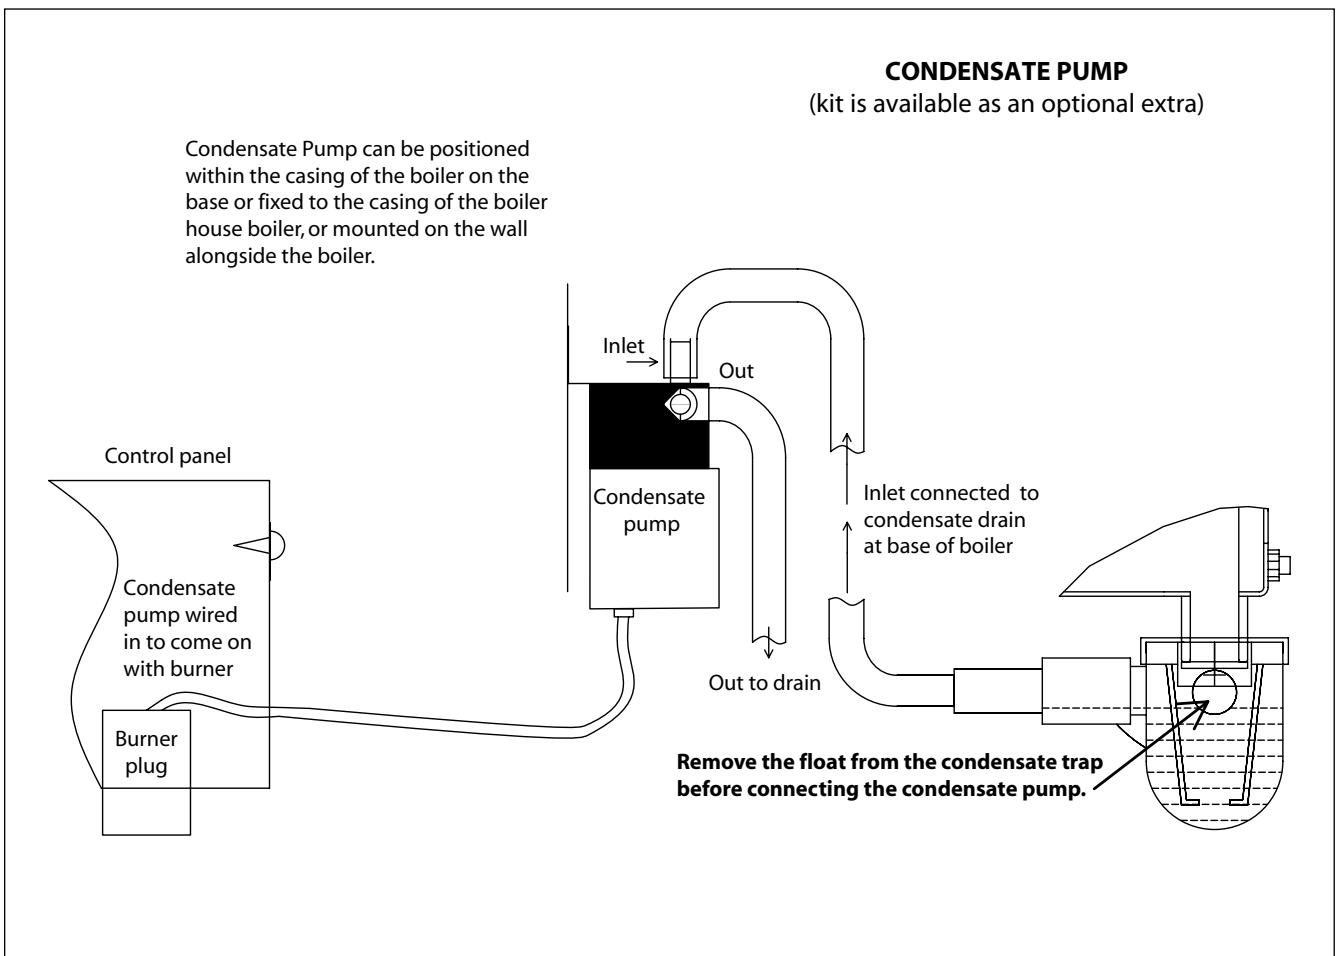


4 4.2 - INSTALLATION - CONDENSATE DISPOSAL


Condensate Trap Fitting

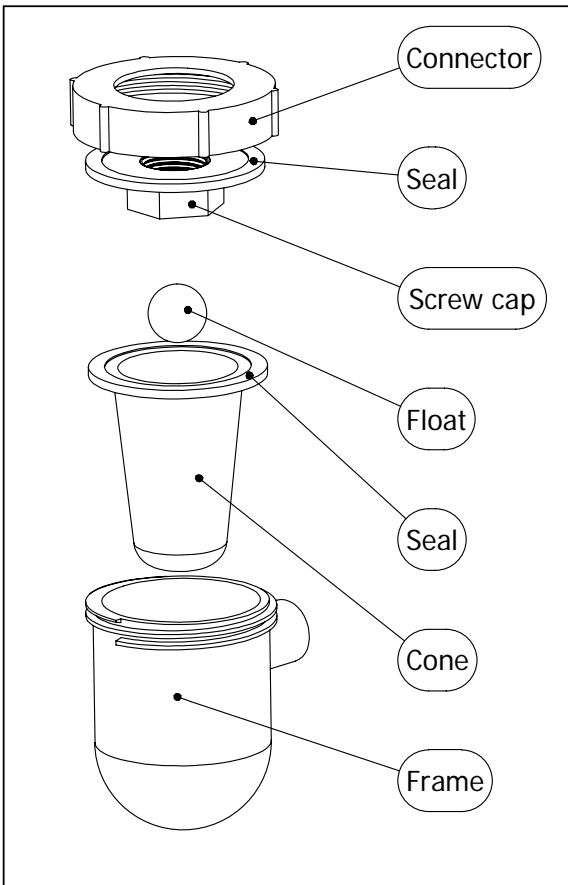


1. Push screw cap into connector and screw onto socket.

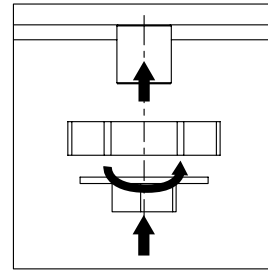


2. Place cone into frame and float into cone.

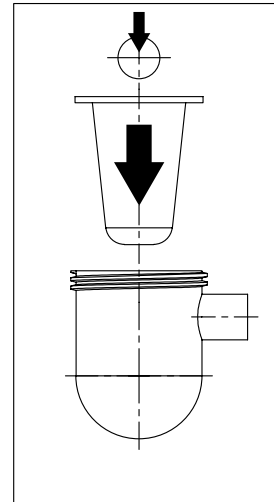



3. Screw frame with cone and float into connector.

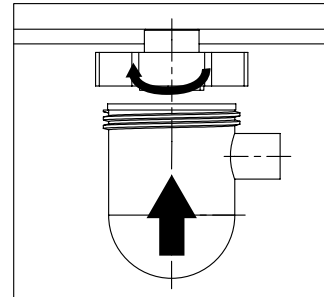

4. Push flexible pipe onto frame socket.

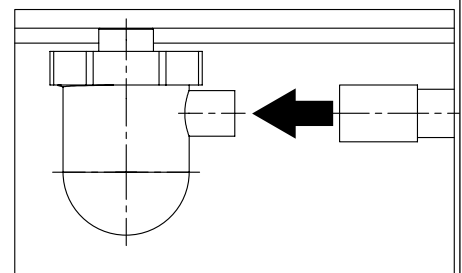

5. Final assembly.

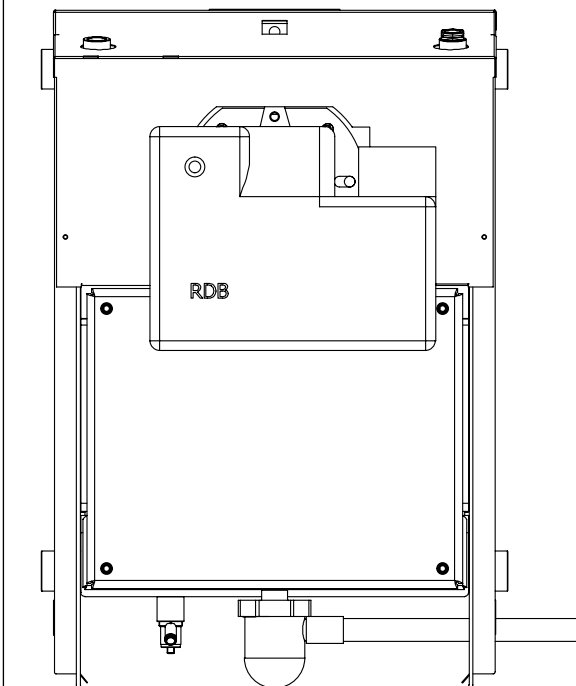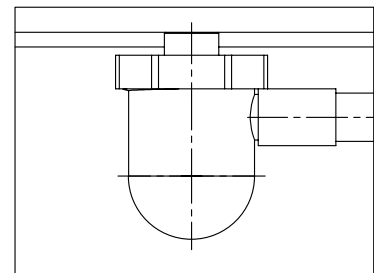

4 4.3 - INSTALLATION - FLUE REGULATIONS

BALANCED FLUE SITING

The terminal should be positioned to avoid combustion products entering the building or accumulating in stagnant pockets around buildings. The terminal must be protected by a guard if it is less than 2 metres above ground level or in a position where any person has access to it (i.e. a balcony). A heat protection shield should be fitted if the terminal is less than 850mm from a plastic or painted gutter or less than 450mm from painted eaves. Prevailing winds should be taken into account when siting a flue.


ALWAYS CHECK FOR ANY BUILDING REGULATIONS AMENDMENTS WHICH MAY HAVE BEEN ISSUED AFTER THE PUBLICATION OF THIS MANUAL

Clearances advised by BS 5410 Part 1: 2014

Regular Appliance (Open, Low Level Discharge and Balanced) Flue Termination Clearance

The basic requirement with regard to flue positioning is that no hazard or nuisance is caused by the flue gases. Diagrams 20a and 20b show clearances advised by BS 5410 Part 1: 2014.

Regional requirements where flue clearances differ can be found in the regional requirements section in OFTEC Book 3 2010.

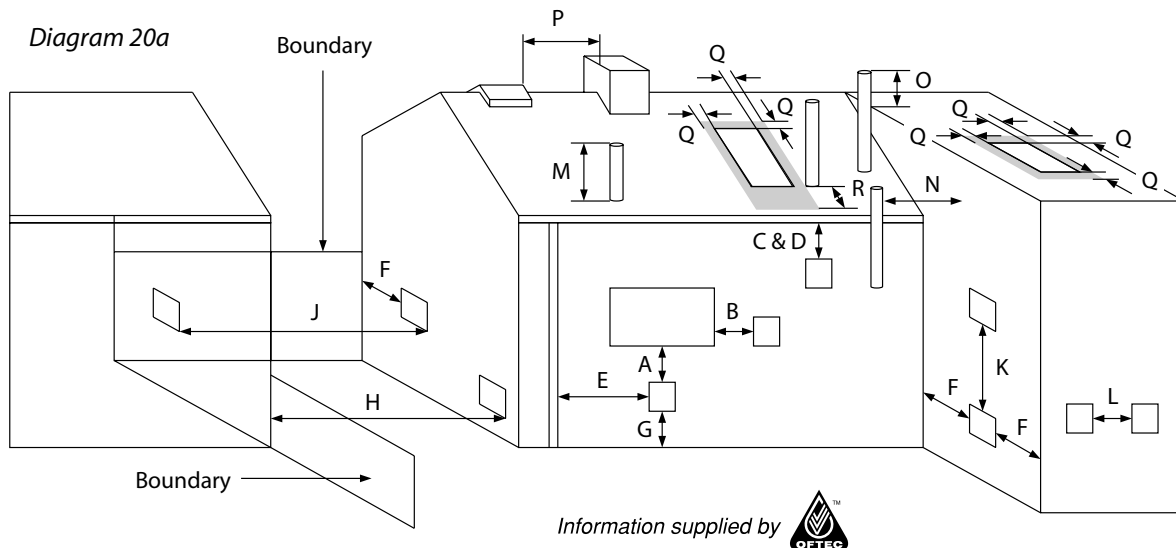

Minimum distances to terminals in millimeters as measured from the top of the chimney or the outer edge of where flue gases pass through low level discharge openings


	Location	Appliance Burner Type	
		Pressure Jet	
		Condensing	
		UK	ROI & NI
A	Directly below an opening, airbrick, opening window etc.	1000mm	600mm
B	Horizontally to an opening, airbrick, opening window etc.	1000mm	600mm
C	Below a gutter, eaves or balcony with protection	1000mm	1000mm
D	Below a gutter or a balcony without protection	1000mm	1000mm
E	From vertical sanitary pipe work	300mm	300mm
F	From an internal or external corner or surface or boundary alongside the terminal	300mm	600mm
G	Above ground or balcony level	300mm	300mm
H	From a surface or a boundary facing the terminal	1200mm	1200mm
J	From a terminal facing the terminal	2500mm	2500mm
K	Vertically from a terminal on the same wall	1500mm	1500mm
L	Horizontally from a terminal on the same wall	750mm	750mm
M	Above the highest point of an intersection with the roof	600mm	600mm
N	From a vertical structure on the side of the terminal	750mm	750mm
O	Above a vertical structure less than 750mm from the side of the terminal	600mm	600mm
P	From a ridge terminal to a vertical structure on the roof	1500mm	1500mm
Q	Above or to the side of any opening on a flat or sloping roof	300mm	300mm
R	Below any opening on a sloping roof	1000mm	1000mm

4 4.3 - INSTALLATION - FLUE REGULATIONS

NOTES: These notes form an integral part of the information shown on the previous page.

1. Terminals should be positioned to avoid products of combustion accumulating in stagnant pockets around the building, or entering into buildings.
2. Appliances burning Class D oil have additional restrictions (see OFTEC Book 3 2010).
3. Vertical structures in N, O and P include lift rooms, parapets, dormers, etc.
4. Terminating positions A to L are only permitted for appliances that have been approved for low level flue and low level balanced flue discharge when tested to BS EN 303-1.
5. Terminating positions must be at least 1.8m distant from an oil storage tank unless a wall with at least 30 minutes fire resistance and extending 300mm higher and wider than the oil storage tank is provided between the oil storage tank and the terminating position.
6. Where a flue is terminated less than 1m away from a projection above it and the projection consists of plastic or has a combustible or painted surface, then a heat shield of at least 750mm wide should be fitted to protect these surfaces.
7. If the lowest part of the terminal is less than 2m above the ground, balcony, flat roof or other place to which a person has access, the terminal must be protected by a guard.
8. Notwithstanding the dimensions given in the diagram and table, a terminal should not be sited closer than 300mm to combustible material.
9. It is essential that a flue or chimney does not pass through the roof within the shaded area shown by dimensions Q and R.
10. Where protection is provided for plastic components, such as guttering, it is essential that this is to the standard specified by the manufacturer of the plastic components.


Diagram 20b

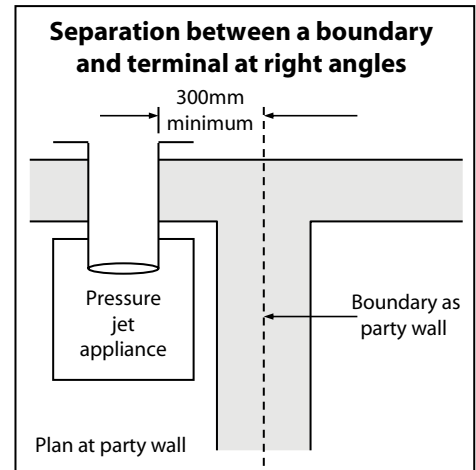

BALANCED FLUE BOILERS

The Firebird boiler may be set for room-sealed flue operation using a Firebird condensing balanced flue kit. This kit does **not** draw **combustion air** from inside the room. **It is drawn from outside, direct to the burner by an air pipe supplied with the boiler.** Flue gases are expelled through the same kit. However, if the boiler is installed in a **compartment** or **small room**, some **ventilation air** is necessary to maintain an acceptable temperature in the boiler area.

Balanced flue boiler in room does not require individual ventilation.

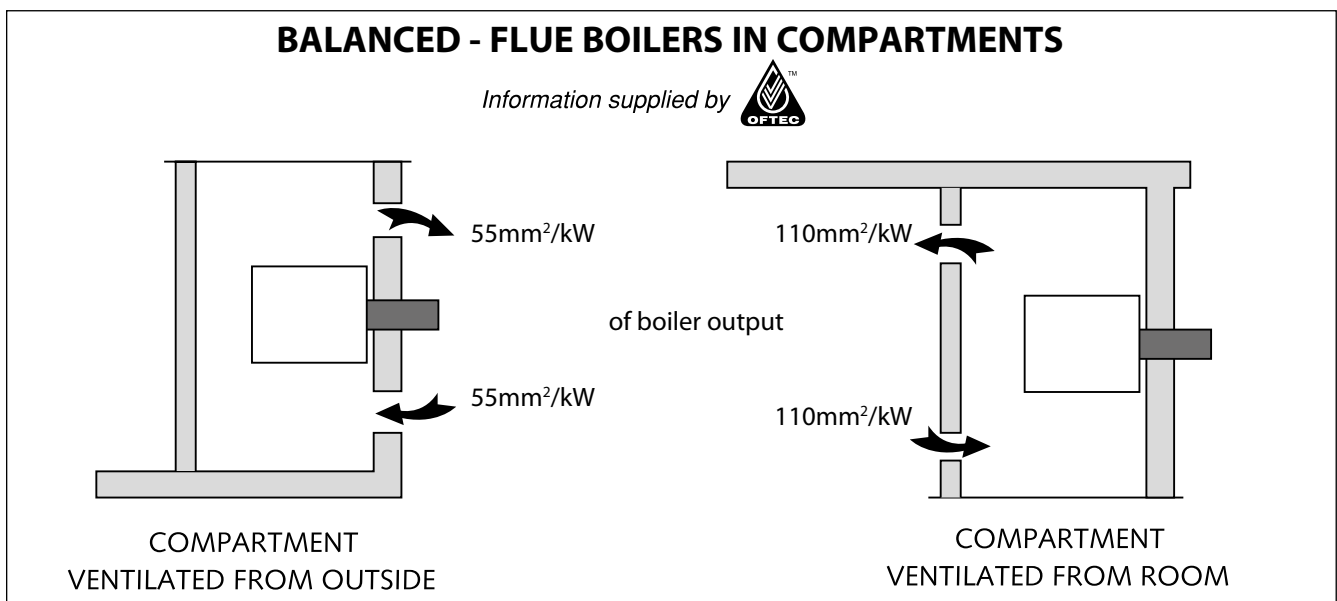


Ventilation and Combustion Air

Conventional Flue Boilers

An adequate supply of **combustion and ventilation air** is essential for efficient and safe boiler operation and the openings for this should be positioned to cause least possible draught, **with no possibility of being accidentally blocked**.

Please note: The British Standard Code of Practice for Oil Firing BS 5410 Part 1: 2014, requires a permanent air inlet opening of **55mm² per kW** of boiler rated output. (Note: 1kW = 3412 BTU/h).

Also, when the boiler is installed in a compartment or confined space, **ventilation** openings are required to ventilate and to avoid overheating in the boiler area.

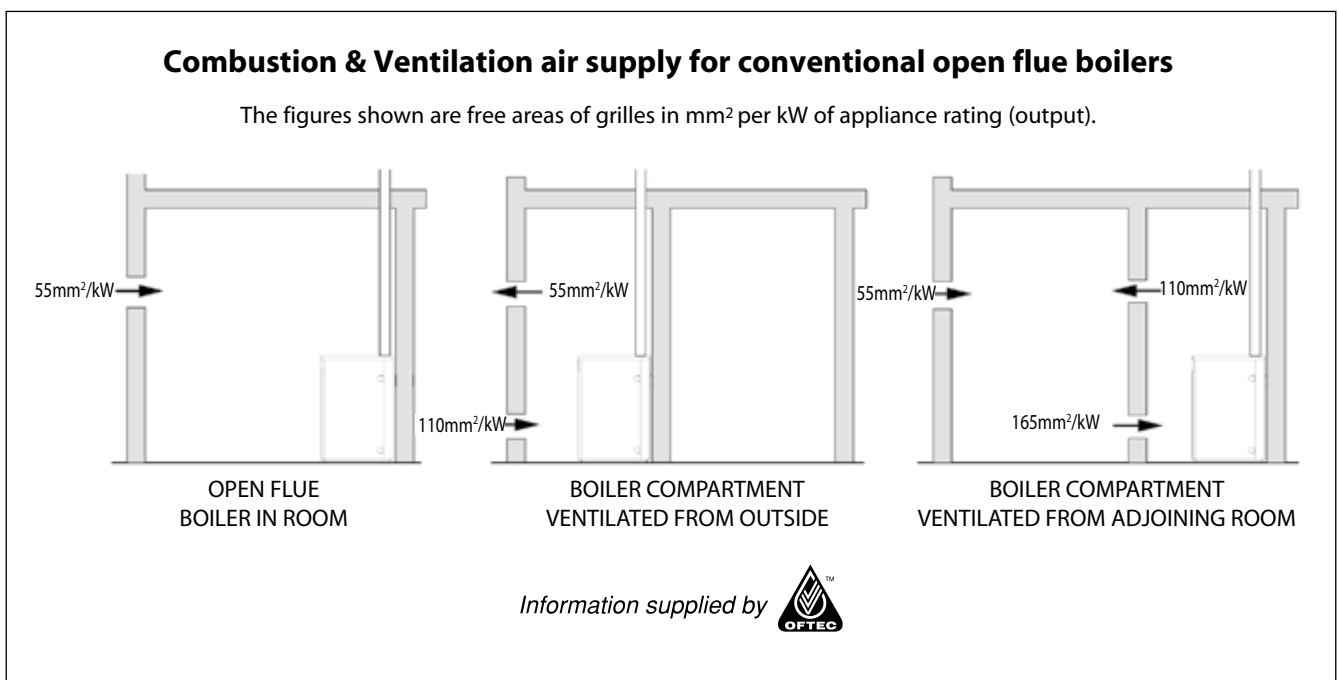

FULL TEXT of both BS 5410 Part 1: 2014 and appropriate Building Regulations for each country should be obtained and fully applied.

N.B. Please note:


BS5410-1: 2014 only permits room sealed models to be installed in a garage.

Definitions




Combustion Air: Air required directly by boiler oil burner for combustion process.

Ventilation Air: Air required in room for ventilation, cooling, etc. and to promote a healthy living environment.

4 4.4 - INSTALLATION - FLAP VALVE

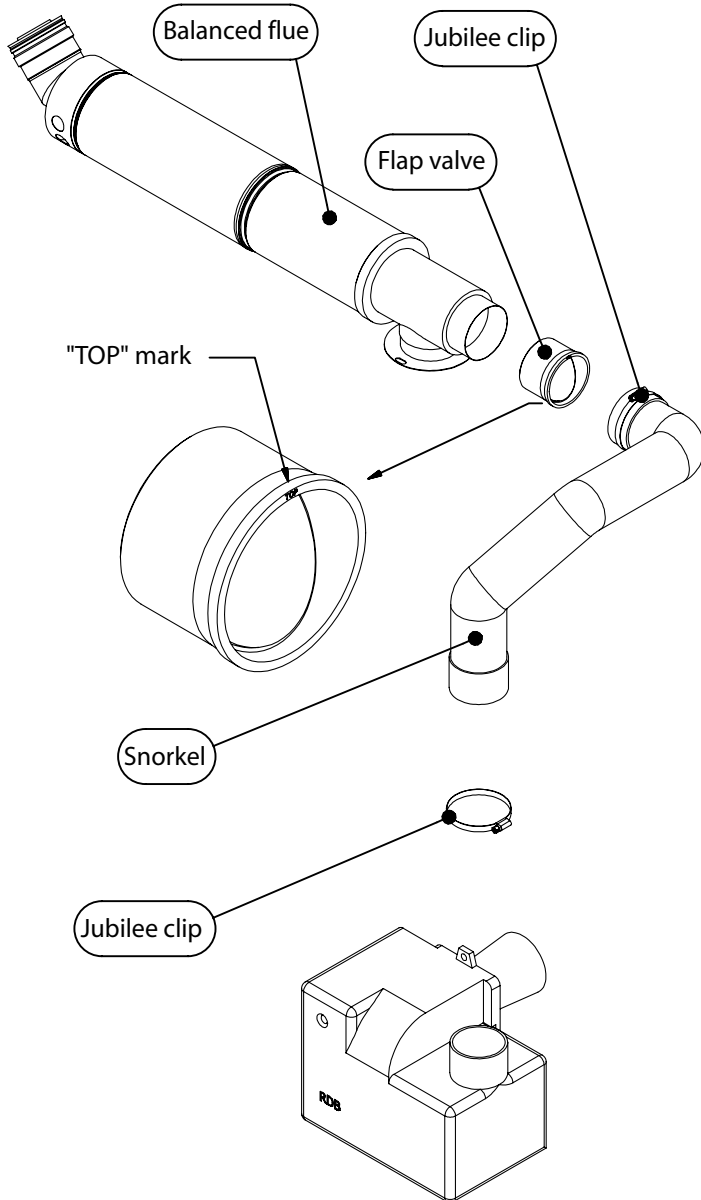

1. Push the flap valve into the balanced flue air intake.
2. Ensure that the flap valve is in the correct position.
3. Push the snorkel hose over the flap valve and air intake and secure with a jubilee clip.
4. Attach the other end of the snorkel hose to the burner with jubilee clip.

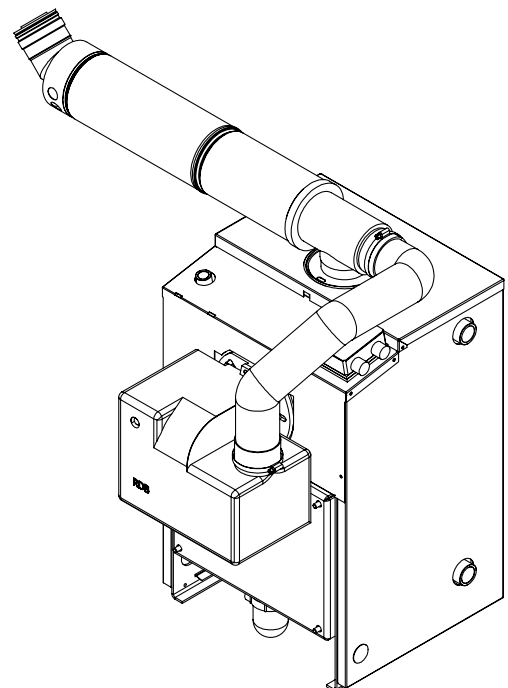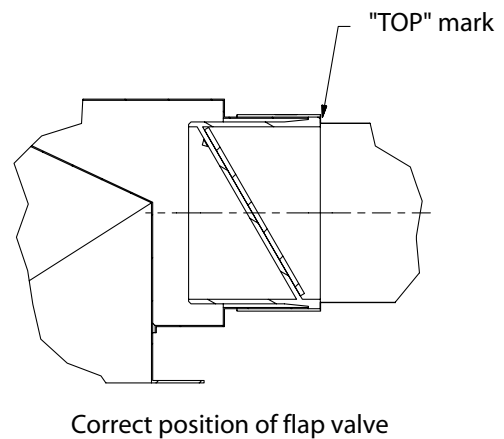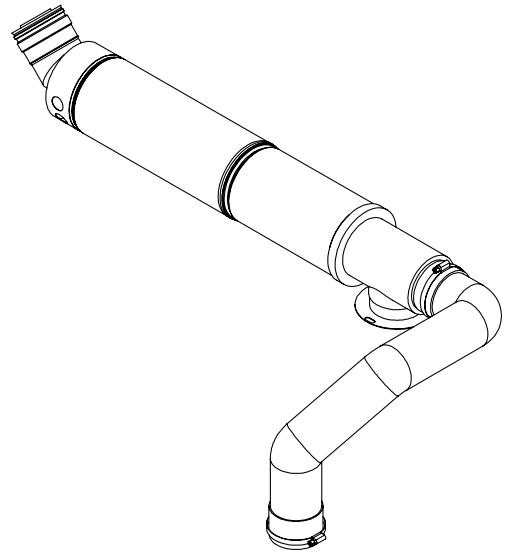


CONDENSATE PLUME DISPERSAL

When choosing the location for a condensing boiler, special consideration must be given to the positioning of the flue terminal. Care should be taken to locate it so as to prevent either the end user or their neighbours perceiving the plume to be a nuisance.


It should be noted that the normal statutory clearances required around low level flue terminals may not be sufficient to cope with plume dispersal from a condensing boiler.

**INSTALLATION INSTRUCTIONS ARE SUPPLIED WITH ALL FLUE KITS
(SEE BELOW FOR HEATPAC AND SLIMLINE HEATPAC)**

HEATPAC & SLIMLINE HEATPAC FLUE

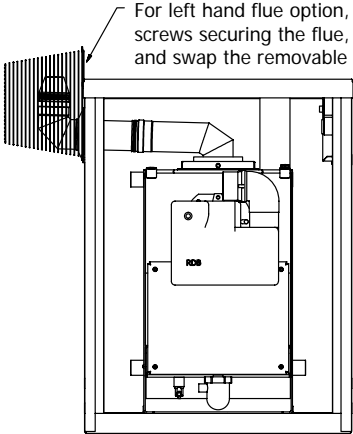


For left hand flue option, remove the two screws securing the flue, rotate the flue and swap the removable side panels.

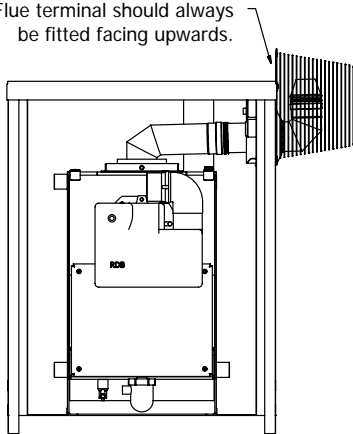


Flue terminal should always be fitted facing upwards.

HEATPAC

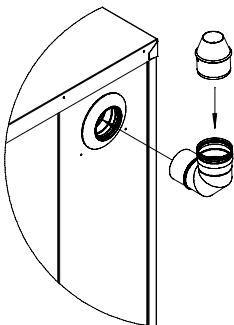


Put the 90° flue terminal with the cone on the boiler.

Fig. 1

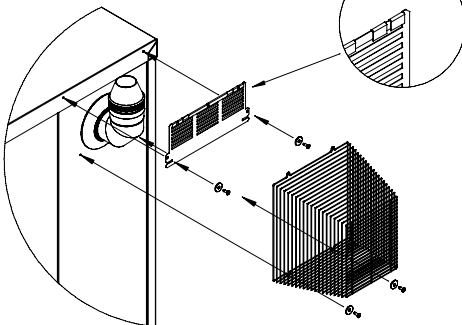

Fix the guard plate to the boiler and then the guard to the boiler.


Fig. 2

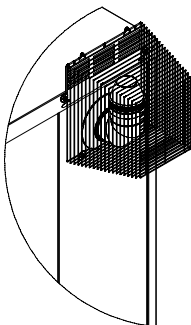

Heatpac boiler after installation.


Fig. 3

SLIMLINE HEATPAC

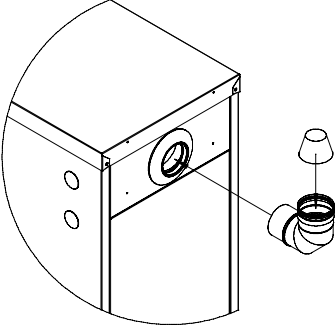


Put the 90° flue terminal with the cone on the boiler.

Fig. 1

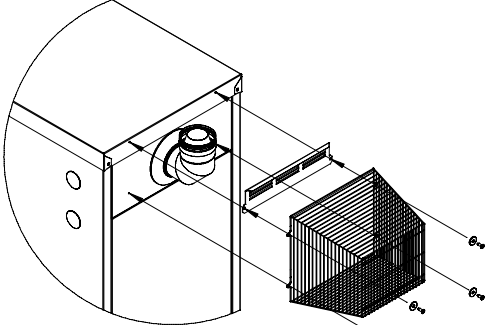

Fix the guard and the guard plate to the boiler.


Fig. 2

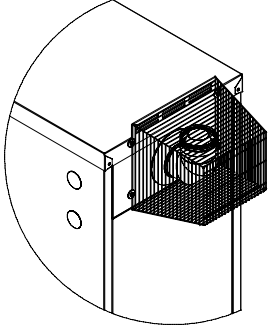


Slimline Heatpac boiler after installation.

Fig. 3

CONDENSING BOILER CHIMNEY INSTALLATION

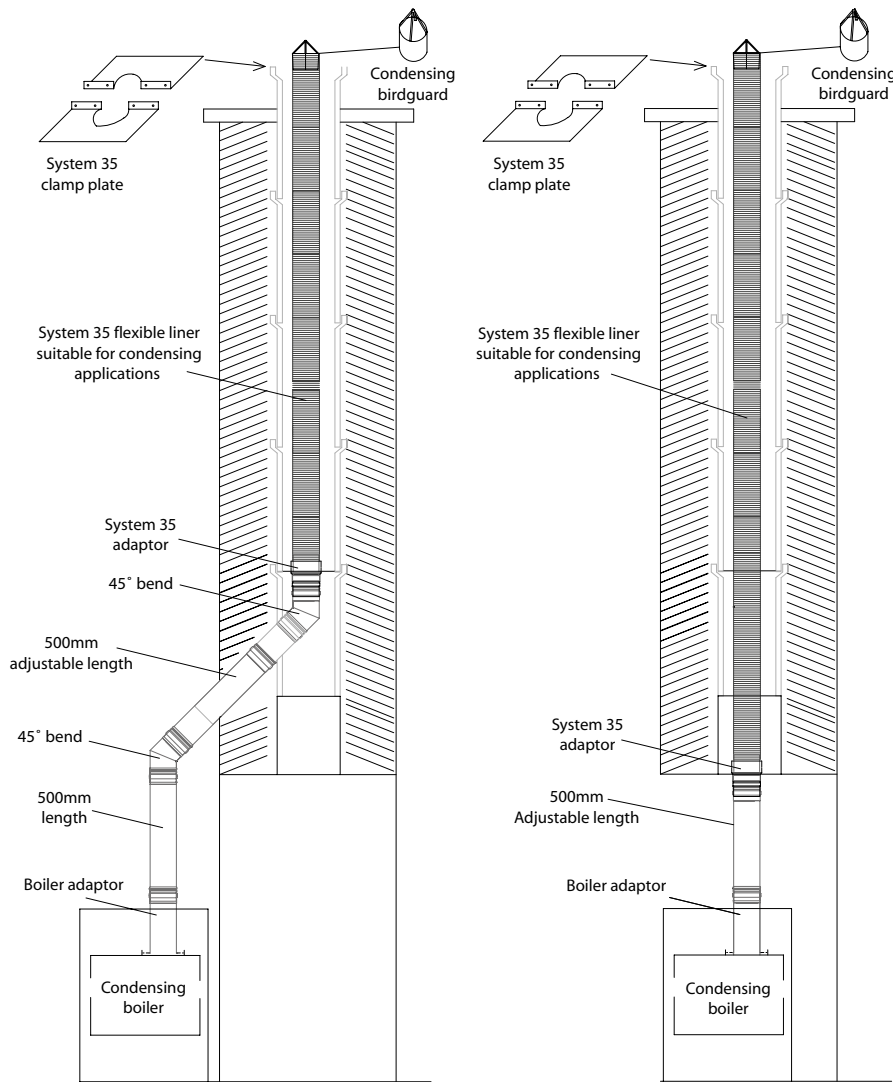

PLUME KIT

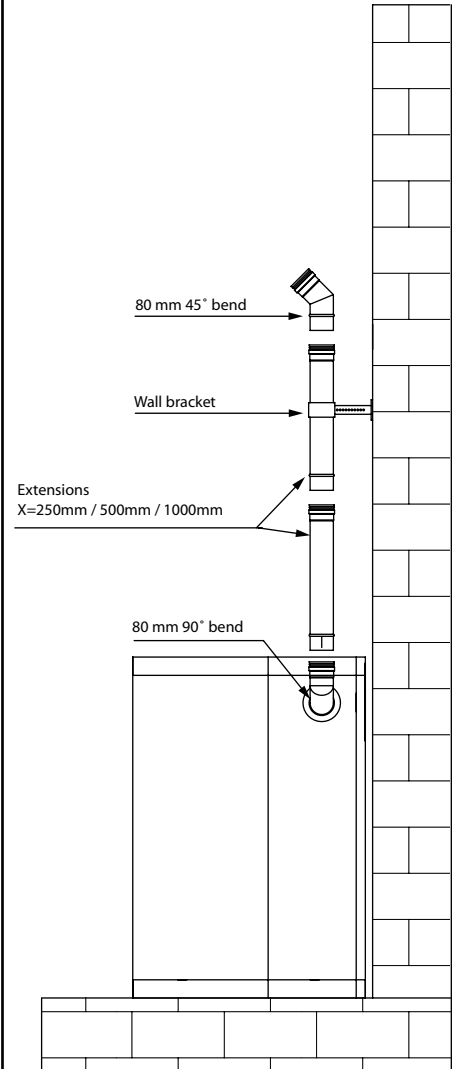

FLUE SIZE

Boiler	Diameter
12-18kW	100mm
12-20kW	100mm
20-26kW	100mm
26-35kW	100mm
35-44kW	100mm
44-58kW	100mm
58-73kW	125mm
73-100kW	125mm

Single wall stainless flue suitable for condensing boilers. Available in stainless steel finish or white finish

NOTE:
All brick chimney constructions must comply with current building regulations and BS 5410 Part 1: 2014. Insulated factory made chimneys should comply with BS 4543.

OIL STORAGE TANK SITING

Consult OFTEC Manuals

It is unlikely that a fire will start at an oil tank. However, the stored fuel must be protected from a fire or heat source that originates nearby. For this reason oil tanks of up to 2,500 litres should be separated from openings, other than airbricks, in the building by a minimum of 1.8m and a non-fire rated boundary by a minimum of 760mm. Where this cannot be achieved, a 30 minute fire rated barrier should be constructed between the hazard and the tank, which extends a minimum of 300mm higher and 300mm past each end of the tank. Note that a minimum separation distance should be maintained between a flue exit and fire barrier (see page 15 (flue clearances).

Steel tanks must be mounted on brick or block piers with a waterproof membrane between the piers and tank.

Oil storage tanks should not be sited within 1.8m of boiler flue outlets.

Do not allow household waste or hot ashes container in vicinity of oil storage tank or boiler flue outlet.

FLEXIBLE OIL PIPE(S)

A flexible burner oil hose is supplied with the boiler which must be wholly contained within the appliance case.

Please note: A filter must not be fitted inside the boiler and all joints in the oil line must be oil tight. Soldered joints are not permissible. Before connecting to the boiler, always flush the complete oil supply line and ensure that oil supply is completely clean and free of any dirt or foreign matter.

OIL LINE CONFIGURATION

Refer to burner manual section on Hydraulic Systems for:

- Two pipe systems.
- Pipe sizing & distance.
- Tank heights.
- Pump priming.

REGULATIONS & STANDARDS

In **England and Wales**, installation in single family dwellings have to comply with the building Regulations Part J. This requires compliance with BS 5410 Part 1 : 2014. All tanks either deemed to be at risk or with a capacity of more than 2,500 litres will require to be banded.

For installation in **Scotland**, Building Standard Part F applies. This requires compliance with BS 5410 Part 1: 2014 and BS 5410 Part 2: 2013. All tanks either deemed to be at risk or with a capacity of more than 2,500 litres will require to be banded.

Those externally installed tanks with a capacity of less than 2,500 litres will require a bund if located not more than 50 metres from a spring or bore hole, 10 metres from controlled waters and additionally where it may constitute a hazard.

The above risks and hazards are described in OFTEC book 3.

In **Northern Ireland**, the Building Regulations do not currently cover the installation of oil storage tanks.

In the **Republic of Ireland** the requirements of BS 5410 Part 1: 2014 and BS 5410 Part 2: 2013 are required to be complied with by Building Regulations Part J.

COMMISSIONING

- ◆ It is the responsibility of the installer to ensure that the boiler is properly commissioned when first used.
- ◆ The boiler should be commissioned by an OFTEC registered, or competent, qualified engineer, familiar with Firebird products.
- ◆ The installation certificate and the commissioning certificate within the boiler passport should be completed and posted to Firebird within 28 days of installation (this can also be done online on the Firebird website). A copy should be retained by the commissioning engineer.
- ◆ The system should be checked thoroughly.

CHECKLIST FOR INSTALLING AND COMMISSIONING A FIREBIRD BOILER

Pre-installation check:

- ◆ Is the following documentation included with the boiler, Installation Manual, Boiler Passport, Burner Book?
- ◆ Is the base on which the boiler is to be installed solid?
- ◆ Allow sufficient room for future servicing of the boiler.

Where does the flue terminate:

- ◆ Make sure there is no window, door or fence within 1 metre of the flue-terminal.
- ◆ If the flue terminates in a corner or into an allyway, re-circulation of the combustion gases in the air intake could occur. A plume dispersal may be required or an alternative flue arrangement might be available. Contact the Firebird technical department for advise.
- ◆ The appropriate class 1 flue must be used with a conventional flue installation. Contact Firebird if unsure.

Power supply:

- ◆ Is a timed, permanent, power supply available, via a fused spur with a 230V 50Hz mains electrical supply and a 5A fuse?

Oil supply:

- ◆ The burner is set for 28 Second Class C fuel.
- ◆ A 15 micron oil filter should be placed in line with an isolating valve prior to entry to the burner.
- ◆ There must be a remote sensing fire valve.
- ◆ Verify that the oil tank has been installed correctly as per building standards.

Boiler check:

- ◆ Baffles should be checked as they may have been disturbed during transport.
- ◆ Check that the condensate trap is fitted securely, primed with water and piped out into a suitable drain. It is easier to check the trap when the boiler door is removed.
- ◆ The boiler door should be refitted, complete with graphite seal and then tightened.

Flue check:


- ◆ The flue must be fitted correctly, with a fall back to the boiler. Note: internal fall of 2.5° within the flue.
- ◆ For concentric balanced flue:
 - the cone supplied should be inserted in to the end of the flue;
 - the wall plate should be fitted with an opening for air under the flue;
 - check that the flue guard is fitted.
- ◆ When installing a Heatpac or a Slimline Heatpac, the 90° bend should be fitted pointing up.

Boiler set-up:

- ◆ For burner set-up, see page 32.
- ◆ Set the air to what is required for the nozzle size +. 5 on the dial - example: the factory setting for a Firebird 26kW has a Danfoss .65 80° ES nozzle with a pump pressure of 9 bar and air at 2.5. The final air setting to suit the boiler set up will be determined by using a flue gas analyser.
- ◆ Turn on the oil supply and switch on power to the boiler.
- ◆ Check all connections for possible leaks.
- ◆ Check thermostat operation and set desired temperature on completion.
- ◆ Use a smoke gun to check clean combustion.

Flue gas analysis and fine tuning of burner:

- ◆ Ensure flue gas is over 50°C when setting CO₂.
- ◆ Allow the boiler to run for a period of time before fine tuning to the Firebird settings.
- ◆ Fine tuning of the burner should take place once the recommended oil pressure value has been obtained. Burner air should then be adjusted to achieve the desired CO₂ setting.
- ◆ Print off a copy of the flue analysis and attach to the boiler passport.
- ◆ Make sure the flue gas analysis plug is replaced correctly into the flue when finished the flue analysis.

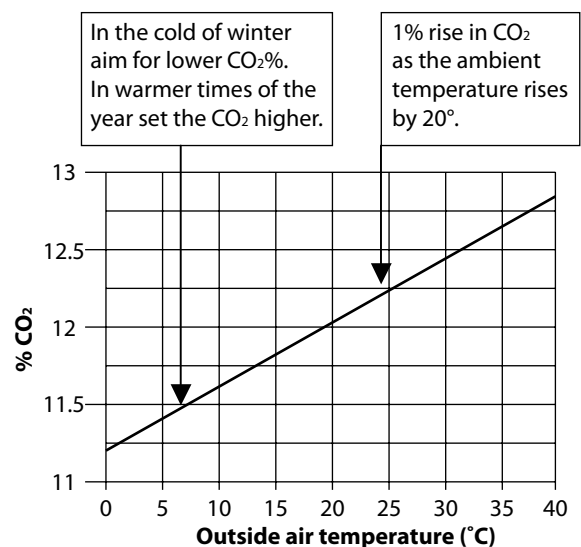

5 COMMISSIONING

HANDING OVER

The householder should receive:

- A clear and concise demonstration of the boiler operation and any system controls.
- This manual, the burner manufacturer's manual and any other instructions.
- OFTEC forms CD10 and CD11.
- The boiler passport.

The householder should be advised to:

- Service the boiler annually and to ensure that the service records in the boiler passport are completed.
- Read the terms and conditions of warranty.
- Keep all boiler documentation in a safe place.

A commissioning record should be completed and a copy retained by the Engineer. This can be found in the Boiler Passport.

6 SERVICING

Annual servicing must be carried out by an OFTEC registered or a competent, qualified engineer, familiar with Firebird products.

Do not commence service until both the electrical and oil supply to the boiler have been safely isolated.

THE OIL TANK

Check for oil leaks. Draw off any accumulated water and sludge from the tank by opening the drain valve. Turn off the oil supply and remove the filter bowl, then wash the element clean with Kerosene. Fit a new element if required.

THE BOILER

Remove combustion access door for access to baffles and to clean heat exchanger.

Cleaning a Firebird condensing boiler:

1. Remove all baffles, including the tubular baffles in the condensing section and clean them.
2. Remove the condensate trap and clean it, place a tray under the connection for the trap. Vacuum out any loose debris from the chamber.

3. Clean the inside of the boiler with a vacuum cleaner.
4. Refit all the baffles and the condensate trap securely.
5. System pressure should not exceed 2 bar at full operating temperature. The expansion vessel should be checked during the annual service to ensure that it is operating correctly.

Check insulation sealing and the silver foil lining in combustion access door - replace if necessary. Check graphite seal and replace if necessary. When refitting this door be careful not to damage the foil and insulation by over tightening.

Check that the condensate trap is secure in position, clean and free of combustion debris. Ensure that the condensate drain is free and not blocked.

Expansion vessel pre-charge pressure should be checked annually and set according to the system design.

THE BURNER

Ensure correct specification replacement nozzle is used.

See page 32 for more information on the burner.


1. Check all oil filters and replace as necessary.
2. Remove burner, clean blast tube and ensure that airways are clear.
3. Ensure electrodes are clean, dry, not broken and are set as per burner specifications.
4. Clean fan and photocell.
5. **Once again check flexible oil lines and connections for damage or leaks, replace as necessary. Replace flexible oil lines every 2 years.**

Combustion Check

1. Carry out a combustion analysis.
2. Follow the steps as set out in the burner set-up section.
3. Check safety operation, pull out the photo cell, cover and make sure the burner locks out.
4. Check the thermostat operation.
5. Allow the boiler to operate for at least two full "on/off" cycles.

Ensure service is recorded in boiler passport.


7 7.1 - HEATPAC - TECHNICAL DETAILS & DIMENSIONS

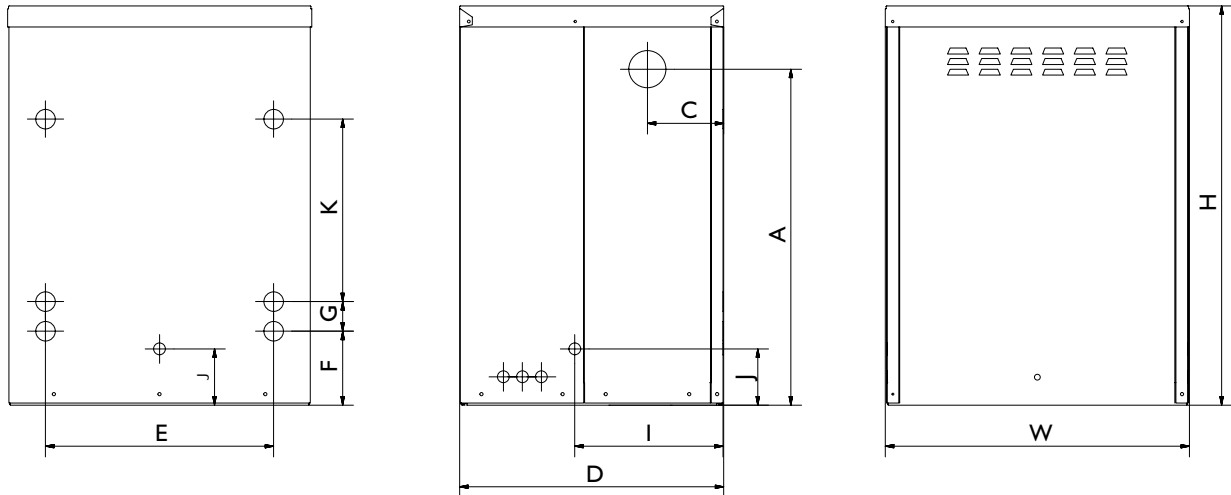

Model - Enviromax (output range)	Dimensions (mm)										
	H	W	D	A	C	E	F	G	I	J	K
Heatpac 12-18kW	945	620	625	795	180	440	175	70	351	133	432
Heatpac 12-20kW	945	720	625	795	180	540	175	70	351	133	432
Heatpac 20-26kW	945	720	625	795	180	540	175	70	351	133	432
Heatpac 26-35kW	945	720	625	795	180	540	175	70	351	133	432
Heatpac 36-44kW	1074	839	855	936	180	684	175	115	507	134	505
Heatpac 58kW	1074	839	855	936	180	684	175	115	507	134	505
Heatpac 73W	1200	903	855	1039	180	684	175	115	507	134	555

Heat Output	kW	12-18	12-20/20-26	26-35	36-44/58	73
CONNECTIONS						
Heating Flow		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP
Heating Return		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP
Drain Off Valve		1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP
Condensate Trap				22 mm dia. plastic		
WATER CONTENT						
Boiler		24 litres	24 litres	24 litres	43.5 litres	54 litres
FLUE Integral flues.						
HEATING SYSTEM (SEALED) Fit in accordance with BS 7074 Part 1, BS 5449, OFTEC standards and all other relevant legislation.						
Preset Pressure Relief Valve 2 bar						
WATER SIDE RESISTANCE						
Flow Rate To Give A Nominal Output At 10K Differential			12-20kW	20-26kW	26-35kW	
Flow Rate Measured			1642 kg/h	2135 kg/h	2874 kg/h	
Waterside Resistance			0.18 mbar	0.18 mbar	0.18 mbar	
Flow Rate To Give A Nominal Output At 20K Differential						
Flow Rate Measured			870 kg/h	1131 kg/h	1523 kg/h	
Waterside Resistance			0.19 mbar	0.19 mbar	0.19 mbar	
PRESSURE JET OIL BURNERS RIELLO RDB 2.2 up to 44kW & RIELLO RDB 4.2 from 58kW to 73kW						
FUEL Kerosene 28 Second Class C						
ELECTRICAL SUPPLY 230V AC 50Hz 5A						
TEMPERATURE CONTROL						
FROST THERMOSTAT FITTED TO ALL OUTDOOR MODELS						
Boiler Central Heating Control				60°C - 80°C		
Boiler Safety Limit				110°C		
Over-run - Fixed				87°C		
Thermostats have an operating tolerance of ± 4°C						


7 7.2 - SLIMLINE HEATPAC - TECHNICAL DETAILS & DIMENSIONS

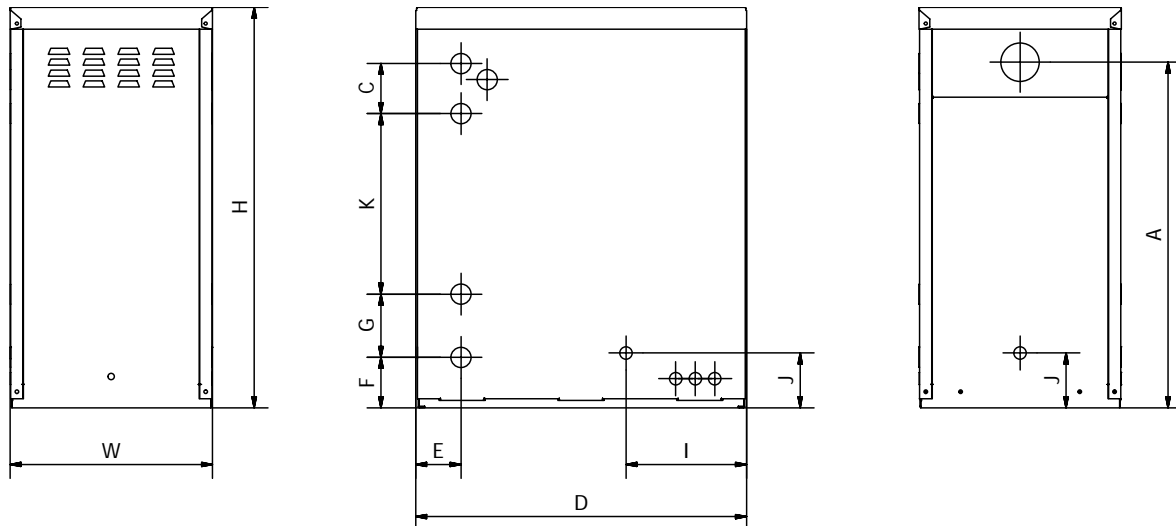

Model - Enviromax (output range)	Dimensions (mm)										
	H	W	D	A	C	E	F	G	I	J	K
Slimline Heatpac 12-20kW	920	465	760	794	115	104	116	145	277	126	415
Slimline Heatpac 20-26kW	920	465	760	794	115	104	116	145	277	126	415
Slimline Heatpac 26-35kW	920	465	760	794	115	104	116	145	277	126	415

Heat Output	kW	12-18	12-20/20-26	26-35
CONNECTIONS				
Heating Flow		1" BSP	1" BSP	1" BSP
Heating Return		1" BSP	1" BSP	1" BSP
Drain Off Valve		1/2" BSP	1/2" BSP	1/2" BSP
Condensate Trap				22 mm dia. plastic
WATER CONTENT				
Boiler		24 litres	24 litres	24 litres
FLUE		Integral flues.		
HEATING SYSTEM (SEALED)		Fit in accordance with BS 7074 Part 1, BS 5449, OFTEC standards and all other relevant legislation.		
Preset Pressure Relief Valve		2 bar		
WATER SIDE RESISTANCE		12-20kW	20-26kW	26-35kW
Flow Rate To Give A Nominal Output At 10K Differential				
Flow Rate Measured		1642 kg/h	2135 kg/h	2874 kg/h
Waterside Resistance		0.18 mbar	0.18 mbar	0.18 mbar
Flow Rate To Give A Nominal Output At 20K Differential				
Flow Rate Measured		870 kg/h	1131 kg/h	1523 kg/h
Waterside Resistance		0.19 mbar	0.19 mbar	0.19 mbar
PRESSURE JET OIL BURNERS		RIELLO RDB 2.2		
FUEL		Kerosene 28 Second Class C		
ELECTRICAL SUPPLY		230V AC 50Hz 5A		
TEMPERATURE CONTROL				
<i>FROST THERMOSTAT FITTED TO ALL OUTDOOR MODELS</i>				
Boiler Central Heating Control		60°C - 80°C		
Boiler Safety Limit		110°C		
Over-run - Fixed		87°C		
Thermostats have an operating tolerance of ± 4°C				


7 7.3 POPULAR - TECHNICAL DETAILS & DIMENSIONS

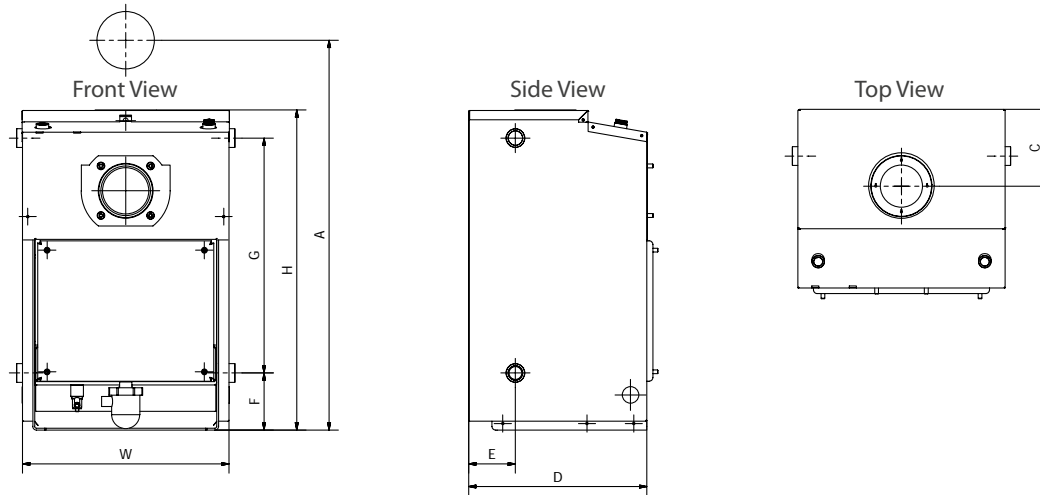

Model - Enviromax (output range)	Weight kg (incl. burner)	Dimensions (mm)					Burner dept	A	C	E	F	G
		H	W	D								
Popular 12-18kW	99	684	344	381	202	753	164	100	122	502		
Popular 12-20kW	107	684	441	381	202	753	164	100	122	502		
Popular 20-26kW	112	684	441	381	202	753	164	100	122	502		
Popular 26-35kW	115	684	441	381	202	753	164	100	122	502		
Popular 36-44kW	182	815	470	531	202	914	154	96	123	620		
Popular 58kW	190	815	470	533	253	914	154	97	128	615		
Popular 73kW	210	873	530	527	253	1024	155	97	123	670		
Popular 80-100kW	300	1052	625	746	253	-	139	112	130	832		

Heat Output	kW	12-18	12-20/20-26	26-35	36-44/58	73	80-100
CONNECTIONS							
Heating Flow		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP	2" BSP
Heating Return		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP	2" BSP
Drain Off Valve		1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP
Condensate Trap				22mm dia. plastic			
WATER CONTENT							
Boiler		24 litres	24 litres	24 litres	43.5 litres	54 litres	75 litres
FLUE (Indoor Boilers)							
Balanced Flue Assembly		125 (5") mm dia.	125 (5") mm dia.	125 (5") mm dia.	150 (6") mm dia.	180 (7") mm dia.	200 (8") mm dia.
Max. Low Level Flue Length		1.5m	1.5m	1.5m	1.5m	1.5m	1.5m
Max. High Level Balanced Flue Length		6m	6m	6m	6m	6m	6m
HEATING SYSTEM (SEALED)							
Preset Pressure Relief Valve		Fit in accordance with BS 7074 Part 1, BS 5449, OFTEC standards and all other relevant legislation. 2 bar					
WATER SIDE RESISTANCE							
Flow Rate To Give A Nominal Output At 10K Differential				12-20kW	20-26kW	26-35kW	
Flow Rate Measured				1642 kg/h	2135 kg/h	2874 kg/h	
Waterside Resistance				0.18 mbar	0.18 mbar	0.18 mbar	
Flow Rate To Give A Nominal Output At 20K Differential							
Flow Rate Measured				870 kg/h	1131 kg/h	1523 kg/h	
Waterside Resistance				0.19 mbar	0.19 mbar	0.19 mbar	
PRESSURE JET OIL BURNERS							
RIELLO RDB 2.2 up to 44kW & RIELLO RDB 4.2 from 58kW to 100kW							
FUEL							
Kerosene 28 Second Class C							
ELECTRICAL SUPPLY							
230V AC 50Hz 5A							
TEMPERATURE CONTROL							
Boiler Central Heating Control		60°C - 80°C					
Boiler Safety Limit		110°C					
Thermostats have an operating tolerance of ± 4°C							


7 7.4 - KITCHEN - TECHNICAL DETAILS & DIMENSIONS

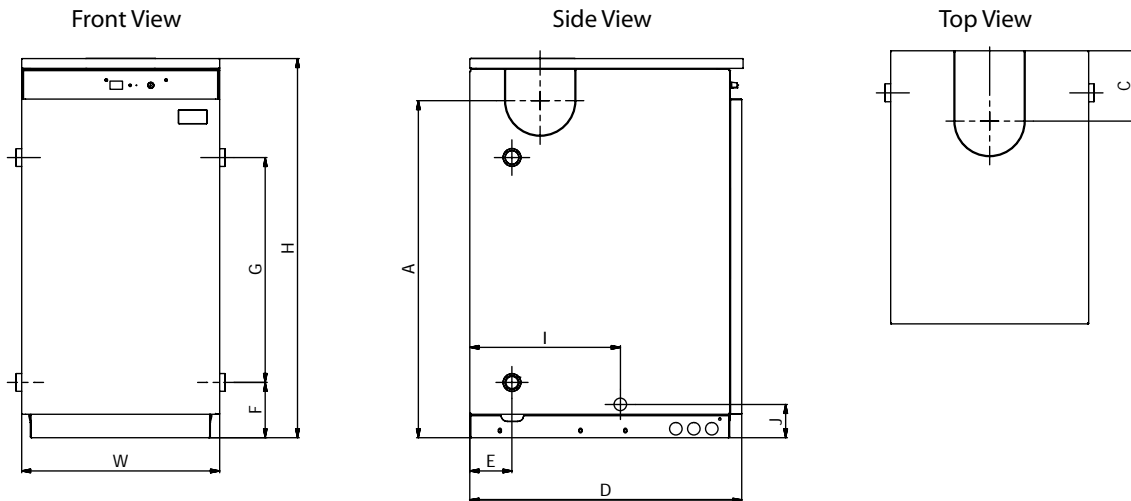

Model - Enviromax (output range)	Weight kg	Dimensions (mm)									
		H	W	D	A	C	E	F	G	I	J
Kitchen 12-18kW	115	847	345	610	753	157	94	124	502	336	75
Kitchen 12-20kW	125	847	442	610	753	157	94	124	502	336	75
Kitchen 20-26kW	128	847	442	610	753	157	94	124	502	336	75
Kitchen 26-35kW	131	847	442	610	753	157	94	124	502	336	75
Kitchen 36-44kW	210	1048	464	852	914	154	100	130	615	485	86
Kitchen 58kW	216	1048	464	852	914	154	100	130	615	485	86
Kitchen 73kW	242	1196	524	851	1024	157	100	125	670	484	86
Commercial Utility 80-100kW	390	1249	623	1071	-	158	130	132	832	723	72

Heat Output	kW	12-18	12-20/20-26	26-35	36-44/58	73	80-100
CONNECTIONS							
Heating Flow		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP	2" BSP
Heating Return		1" BSP	1" BSP	1" BSP	1 1/2" BSP	1 1/2" BSP	2" BSP
Drain Off Valve		1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP	1/2" BSP
Condensate Trap				22mm dia. plastic			
WATER CONTENT							
Boiler		24 litres	24 litres	24 litres	43.5 litres	54 litres	75 litres
FLUE (Indoor Boilers)							
Balanced Flue Assembly		125 (5") mm dia.	125 (5") mm dia.	125 (5") mm dia.	150 (6") mm dia.	180 (7") mm dia.	200 (8") mm dia.
Max. Low Level Flue Length		1.5m	1.5m	1.5m	1.5m	1.5m	1.5m
Max. High Level Balanced Flue Length		6m	6m	6m	6m	6m	6m
HEATING SYSTEM (SEALED)							
Preset Pressure Relief Valve		Fit in accordance with BS 7074 Part 1, BS 5449, OFTEC standards and all other relevant legislation.					
		2 bar					
WATER SIDE RESISTANCE							
Flow Rate To Give A Nominal Output At 10K Differential				12-20kW	20-26kW	26-35kW	
Flow Rate Measured				1642 kg/h	2135 kg/h	2874 kg/h	
Waterside Resistance				0.18 mbar	0.18 mbar	0.18 mbar	
Flow Rate To Give A Nominal Output At 20K Differential							
Flow Rate Measured				870 kg/h	1131 kg/h	1523 kg/h	
Waterside Resistance				0.19 mbar	0.19 mbar	0.19 mbar	
PRESSURE JET OIL BURNERS							
RIELLO RDB 2.2 up to 44kW & RIELLO RDB 4.2 from 58kW to 100kW							
FUEL							
Kerosene 28 Second Class C							
ELECTRICAL SUPPLY							
230V AC 50Hz 5A							
TEMPERATURE CONTROL							
Boiler Central Heating Control		60°C - 80°C					
Boiler Safety Limit		110°C					
Thermostats have an operating tolerance of ± 4°C							

8 8.1 - HEATPAC - PARTS

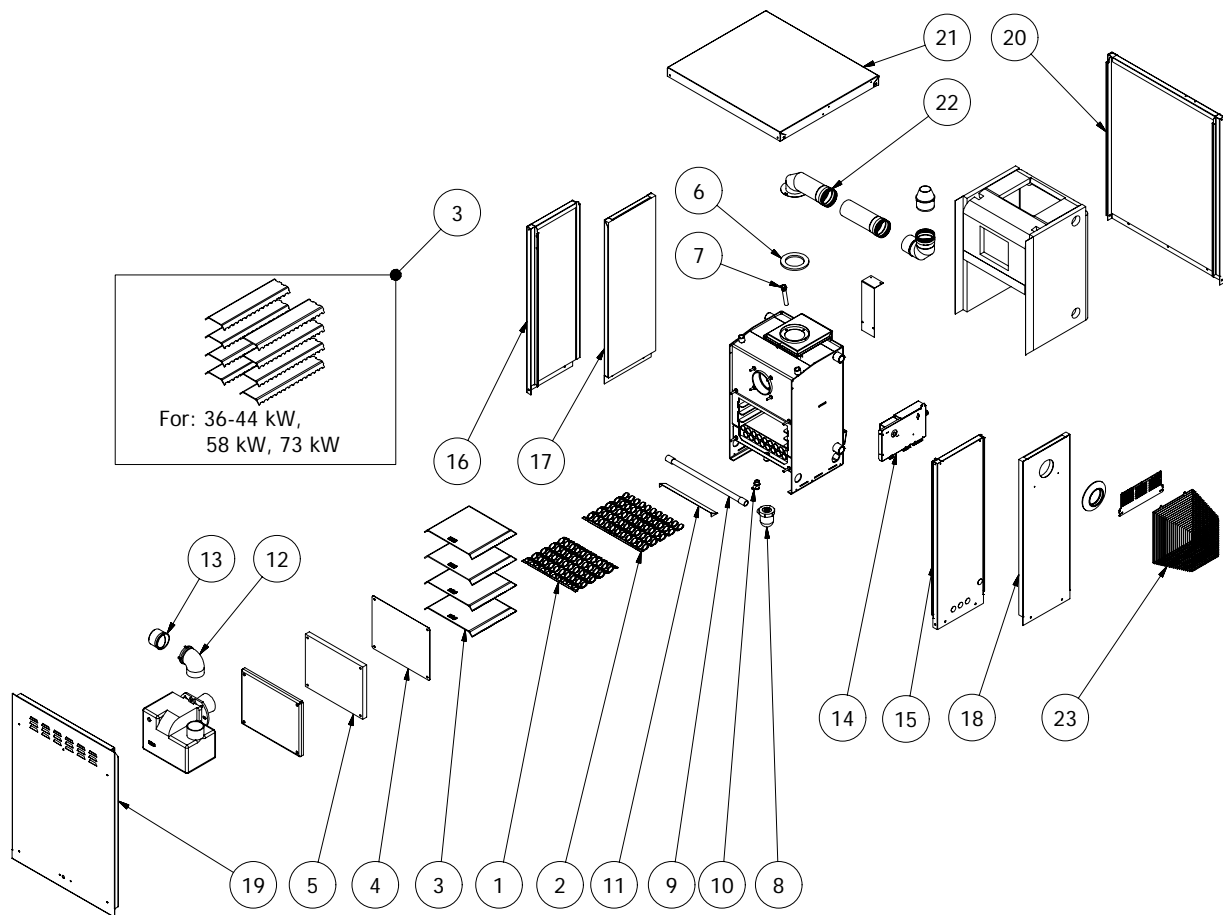


HEATPAC

No.	Qty	Description	12-18 kW	12-20 kW	20-26 kW	26-35 kW	36-44 kW	58 kW	73 kW
1	-	Tube baffle	BA110907	BA110907	BA110907	BA110907	BA111503	BA111503	BA111503
2	-	Tube baffle single	BA110908	BA110908	BA110908	BA110908	BA111502	BA111502	BA111502
3	4	Smoke baffle	BA212809	BA212022	BA212028	BA212122	BA211651	BA211640	BA211501
4	1	Door seal	ACC015GRA	ACC035GRA	ACC035GRA	ACC035GRA	ACC044GRA	ACC044GRA	ACC073GRA
5	1	Door duroboard	ACC015GSK	ACC035GSK	ACC035GSK	ACC035GSK	ACC044GSK	ACC044GSK	ACC073GSK
6	1	Flue gasket	ACC000FRG	ACC000FRG	ACC000FRG	ACC000FRG	ACC044FRG	ACC044FRG	ACC073FRG
7	1	Stat pocket	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT
8	1	Condensate trap	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP
9	1	Condensate hose	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX
10	1	Drain cock	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC
11	1	Heat deflector	ACC015HTD	ACC000HTD	ACC000HTD	ACC000HTD	ACC044HTD	ACC044HTD	ACC073HTD
12	1	Flap valve adapter	ACC000FVA	ACC000FVA	ACC000FVA	ACC000FVA	ACC000FVA	n/a	n/a
13	1	Flap valve	ACC000FLP	ACC000FLP	ACC000FLP	ACC000FLP	ACC000FLP	n/a	n/a
14	1	Control panel	ACP001HPK	ACP001HPK	ACP001HPK	ACP001HPK	ACP001HPK	ACP001HPK	ACP001HPK
15	1	Casing fixed right side	ACP002CCP	ACP002CCP	ACP002CCP	ACP002CCP	ACP002HP3	ACP002HP3	ACP002HP4
16	1	Casing fixed left side	ACP003CCP	ACP003CCP	ACP003CCP	ACP003CCP	ACP003HP3	ACP003HP3	ACP003HP4
17	1	Casing removable left side	ACP103CCP	ACP103CCP	ACP103CCP	ACP103CCP	ACP103HP3	ACP103HP3	ACP103HP4
18	1	Casing removable right side	ACP102CCP	ACP102CCP	ACP102CCP	ACP102CCP	ACP102HP3	ACP102HP3	ACP102HP4
19	1	Casing front	ACP004HP2	ACP004CCP	ACP004CCP	ACP004CCP	ACP004HP3	ACP004HP3	ACP004HP4
20	1	Casing back	ACP006HP2	ACP006HPK	ACP006HPK	ACP006HPK	ACP006HP3	ACP006HP3	ACP006HP4
21	1	Casing top	ACP005HP2	ACP005CCP	ACP005CCP	ACP005CCP	ACP005HP3	ACP005HP3	ACP005HP4
22	1	Flue kit	HPF035KIT	HPF035KIT	HPF035KIT	HPF035KIT	HPF044KIT	HPF044KIT	HPF058KIT
23	1	Terminal guard	ACC000CTG	ACC000CTG	ACC000CTG	ACC000CTG	ACC000CTG	ACC000CTG	ACC073CTG

For burner parts refer to Burner manual

FIREBIRD

8 8.2 - SLIMLINE HEATPAC - PARTS

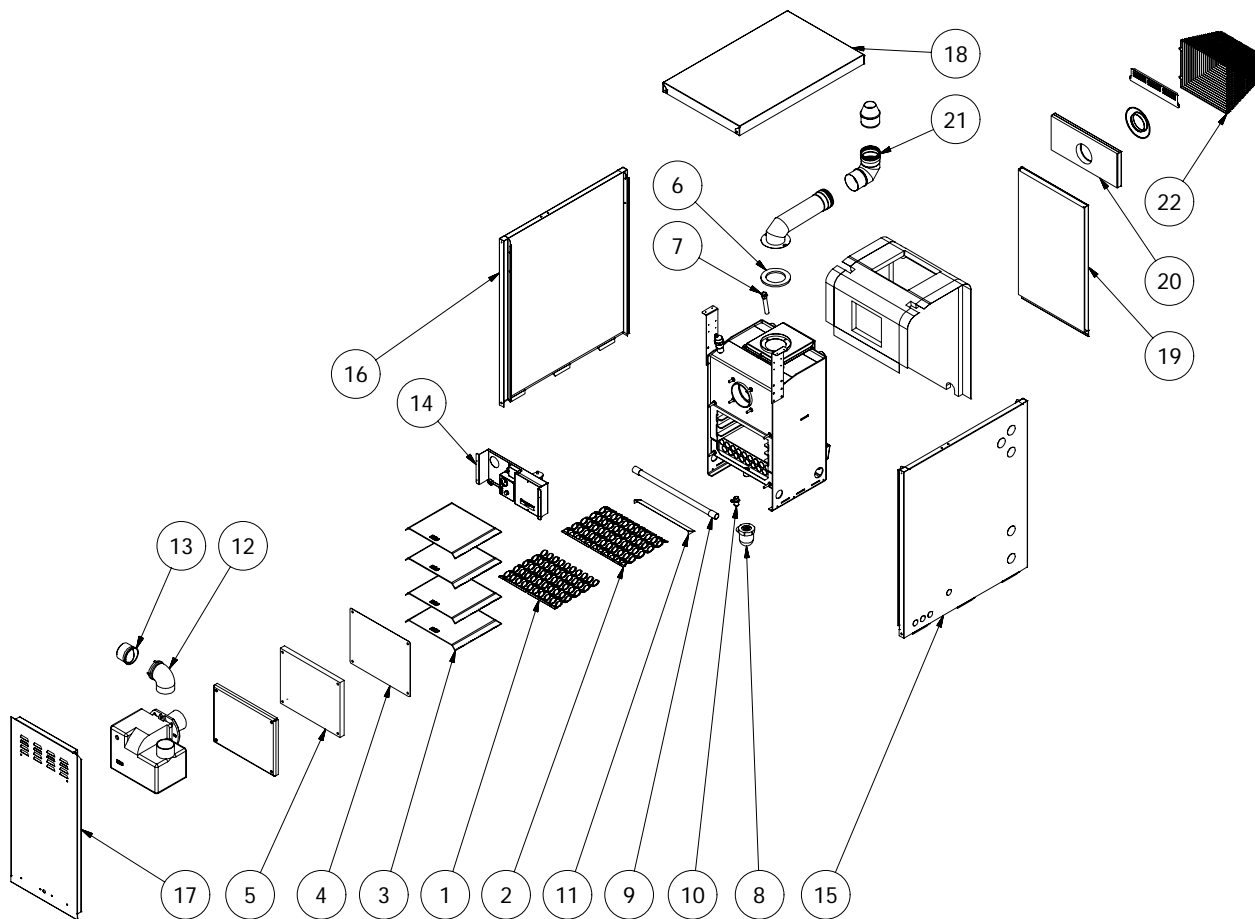


No.	Qty	Description	12-20 kW	20-26 kW	26-35 kW
1		Tube baffle	BA110907	BA110907	BA110907
2		Tube baffle single	BA110908	BA110908	BA110908
3	4	Smoke baffle	BA212022	BA212028	BA212122
4	1	Door seal	ACC035GRA	ACC035GRA	ACC035GRA
5	1	Door duroboard	ACC035GSK	ACC035GSK	ACC035GSK
6	1	Flue gasket	ACC000FRG	ACC000FRG	ACC000FRG
7	1	Stat pocket	ACC003PKT	ACC003PKT	ACC003PKT
8	1	Condensate trap	ACC000TRP	ACC000TRP	ACC000TRP
9	1	Condensate hose	ACC000FLX	ACC000FLX	ACC000FLX
10	1	Drain cock	ACC012DRC	ACC012DRC	ACC012DRC
11	1	Heat deflector	ACC000HTD	ACC000HTD	ACC000HTD
12	1	Flap valve adapter	ACC000FVA	ACC000FVA	ACC000FVA
13	1	Flap valve	ACC000FLP	ACC000FLP	ACC000FLP
14	1	Control panel	ACP001SLM	ACP001SLM	ACP001SLM
15	1	Casing right side	ACP002SLM	ACP002SLM	ACP002SLM
16	1	Casing left side	ACP003SLM	ACP003SLM	ACP003SLM
17	1	Casing front	ACP004SLM	ACP004SLM	ACP004SLM
18	1	Casing top	ACP005SLM	ACP005SLM	ACP005SLM
19	1	Casing back	ACP006SLM	ACP006SLM	ACP006SLM
20	1	Casing flue outlet	ACP106SLM	ACP106SLM	ACP106SLM
21	1	Flue kit	HPF035SLM	HPF035SLM	HPF035SLM
22	1	Terminal guard	ACC000CTG	ACC000CTG	ACC000CTG

For burner parts refer to Burner manual


FIREBIRD

8 8.3 - POPULAR - PARTS

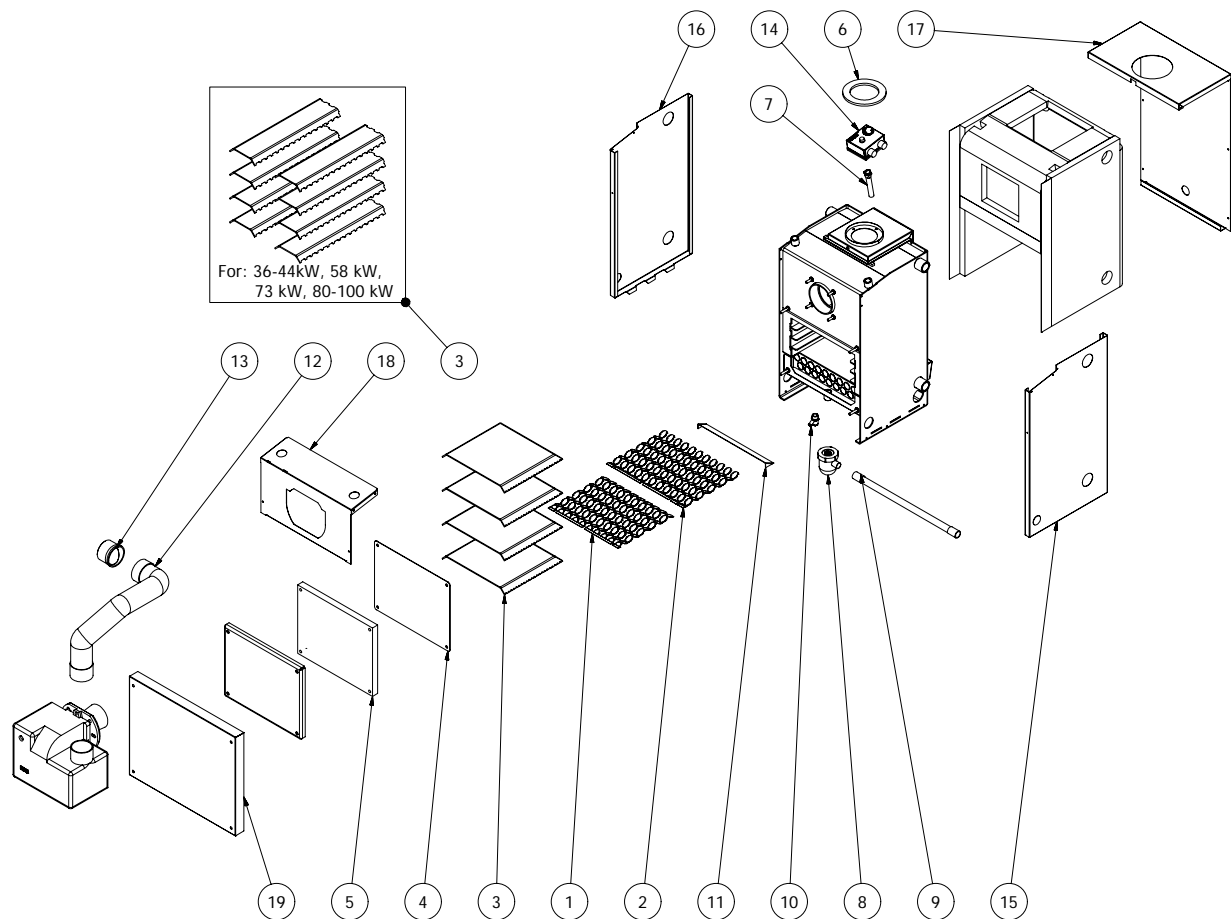

POPULAR

No.	Qty	Description	12-18 kW	12-20 kW	20-26 kW	26-35 kW	36-44 kW	58 kW	73 kW	80-100 kW
1	-	Tube baffle	BA110907	BA110907	BA110907	BA110907	BA111503	BA111503	BA111503	BA111503
2	-	Tube baffle single	BA110908	BA110908	BA110908	BA110908	BA111502	BA111502	BA111502	BA111502
3	4	Smoke baffle	BA212809	BA212022	BA212028	BA212122	BA211651	BA211640	BA211501	BA212419
4	1	Door seal	ACC015GRA	ACC035GRA	ACC035GRA	ACC035GRA	ACC044GRA	ACC044GRA	ACC073GRA	ACC100GRA
5	1	Door duroboard	ACC015GSK	ACC035GSK	ACC035GSK	ACC035GSK	ACC044GSK	ACC044GSK	ACC073GSK	ACC100GSK
6	1	Flue gasket	ACC000FRG	ACC000FRG	ACC000FRG	ACC000FRG	ACC044FRG	ACC044FRG	ACC073FRG	ACC100FRG
7	1	Stat pocket	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT
8	1	Condensate trap	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP
9	1	Condensate hose	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX
10	1	Drain cock	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC
11	1	Heat deflector	ACC015HTD	ACC000HTD	ACC000HTD	ACC000HTD	ACC044HTD	ACC044HTD	ACC073HTD	ACC100HTD
12	1	Air hose	ACC000SSH	ACC000SSH	ACC000SSH	ACC000SSH	ACC000LSH	ACC000LSH	ACC000LSH	ACC000LSH
13	1	Flap valve	ACC000FLP	ACC000FLP	ACC000FLP	ACC000FLP	n/a	n/a	n/a	n/a
14	1	Dual thermostat	ACC000THR	ACC000THR	ACC000THR	ACC000THR	ACC000THR	ACC000THR	ACC000THR	ACC000THR
15	1	Casing right side	ACP002POP	ACP002POP	ACP002POP	ACP002POP	ACP002PO3	ACP002PO3	ACP002PO4	ACP002PO5
16	1	Casing left side	ACP003POP	ACP003POP	ACP003POP	ACP003POP	ACP003PO3	ACP003PO3	ACP003PO4	ACP003PO5
17	1	Casing back	ACP006PO2	ACP006POP	ACP006POP	ACP006POP	ACP006PO3	ACP006PO3	ACP006PO4	ACP006PO5
18	1	Casing burner panel	ACP104PO2	ACP104POP	ACP104POP	ACP104POP	ACP104PO3	ACP104PO3	ACP104PO4	ACP104PO5
19	1	Casing front	n/a	n/a	n/a	n/a	n/a	n/a	n/a	ACP004POP

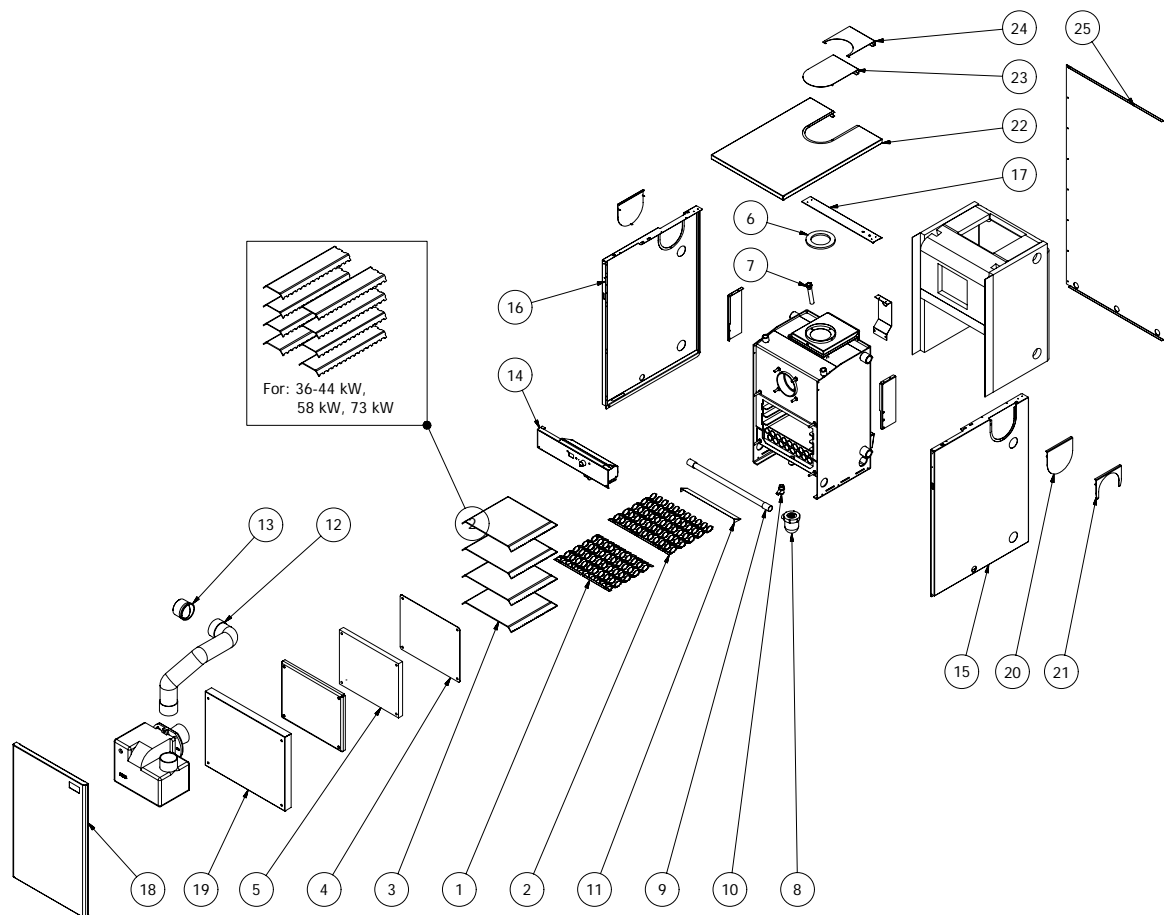

No.	Qty	Description	12-18 kW	12-20 kW	20-26 kW	26-35 kW	36-44 kW	58 kW	73 kW	80-100 kW
1	-	Tube baffle	BA110907	BA110907	BA110907	BA110907	BA111503	BA111503	BA111503	BA111503
2	-	Tube baffle single	BA110908	BA110908	BA110908	BA110908	BA111502	BA111502	BA111502	BA111502
3	4	Smoke baffle	BA212809	BA212022	BA212028	BA212122	BA211651	BA211640	BA211501	BA212419
4	1	Door seal	ACC015GRA	ACC035GRA	ACC035GRA	ACC035GRA	ACC044GRA	ACC044GRA	ACC073GRA	ACC100GRA
5	1	Door duroboard	ACC015GSK	ACC035GSK	ACC035GSK	ACC035GSK	ACC044GSK	ACC044GSK	ACC073GSK	ACC100GSK
6	1	Flue gasket	ACC000FRG	ACC000FRG	ACC000FRG	ACC000FRG	ACC044FRG	ACC044FRG	ACC073FRG	ACC100FRG
7	1	Stat pocket	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT	ACC003PKT
8	1	Condensate trap	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP	ACC000TRP
9	1	Condensate hose	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX	ACC000FLX
10	1	Drain cock	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC	ACC012DRC
11	1	Heat deflector	ACC015HTD	ACC000HTD	ACC000HTD	ACC000HTD	ACC044HTD	ACC044HTD	ACC073HTD	ACC100HTD
12	1	Air hose	ACC000SSH	ACC000SSH	ACC000SSH	ACC000SSH	ACC000LSH	ACC000LSH	ACC000LSH	ACC000LSH
13	1	Flap valve	ACC000FLP	ACC000FLP	ACC000FLP	ACC000FLP	ACC000FLP	n/a	n/a	n/a
14	1	Control panel	ACP001CK2	ACP001CK1	ACP001CK1	ACP001CK1	ACP001CK3	ACP001CK3	ACP001CK4	ACP001CK5
15	1	Casing right side	ACP002CK1	ACP002CK1	ACP002CK1	ACP002CK1	ACP002CK3	ACP002CK3	ACP002CK4	ACP002CK5
16	1	Casing left side	ACP003CK1	ACP003CK1	ACP003CK1	ACP003CK1	ACP003CK3	ACP003CK3	ACP003CK4	ACP003CK5
17	1	Casing back support	ACP006CK2	ACP006CK1	ACP006CK1	ACP006CK1	ACP006CK3	ACP006CK3	ACP006CK4	ACP016CK5
18	1	Casing front	ACP004CK2	ACP004CK1	ACP004CK1	ACP004CK1	ACP004CK3	ACP004CK3	ACP004CK4	ACP004CK5
19	1	Casing door panel	n/a	n/a	n/a	n/a	n/a	n/a	n/a	ACP011CK5
20	2	Side flue blank	ACP007CCE	ACP007CCE	ACP007CCE	ACP007CCE	n/a	n/a	n/a	n/a
21	1	Side half moon blank	ACP008CCE	ACP008CCE	ACP008CCE	ACP008CCE	n/a	n/a	n/a	n/a
22	1	Casing top	ACP005CK2	ACP005CK1	ACP005CK1	ACP005CK1	ACP005CK3	ACP005CK3	ACP005CK4	ACP005CK5
23	1	Top flue blank	ACP009CK1	ACP009CK1	ACP009CK1	ACP009CK1	ACP009CK3	ACP009CK3	ACP009CK4	ACP009CK5
24	1	Top half moon blank	ACP010CK1	ACP010CK1	ACP010CK1	ACP010CK1	ACP010CK3	ACP010CK3	ACP010CK4	n/a
25	1	Casing back	n/a	n/a	n/a	n/a	n/a	n/a	n/a	ACP006CK5

9 9.1 - HEATPAC - WIRING

ELECTRICAL SUPPLY


230V 50Hz mains electric supply protected with a 5A fuse.

This appliance must be earthed.


A qualified electrician must carry out all electric wiring in accordance with current I.E.E Regulations and any local regulations which may apply.

The mains electrical supply must be taken from a double pole isolating switch with a 5A fuse, positioned somewhere close to the boiler. A heat resisting cable must be used which can be routed into the boiler through the access provided on either side of the base. Ancillary controls may be provided for with terminal connections in the control panel.

4 PIN (ANALOGUE)

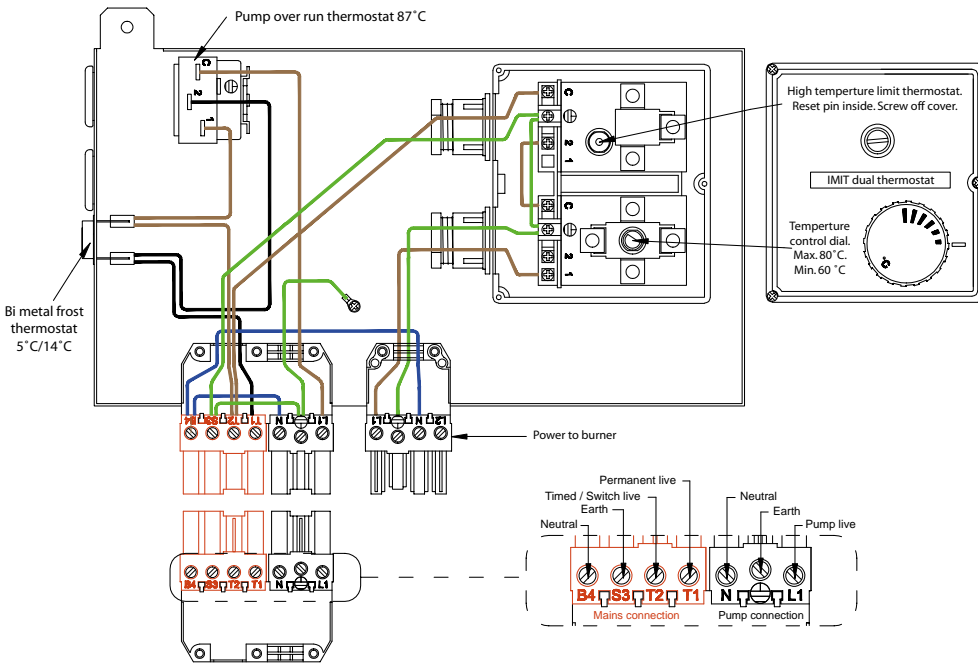

5 PIN (DIGITAL)

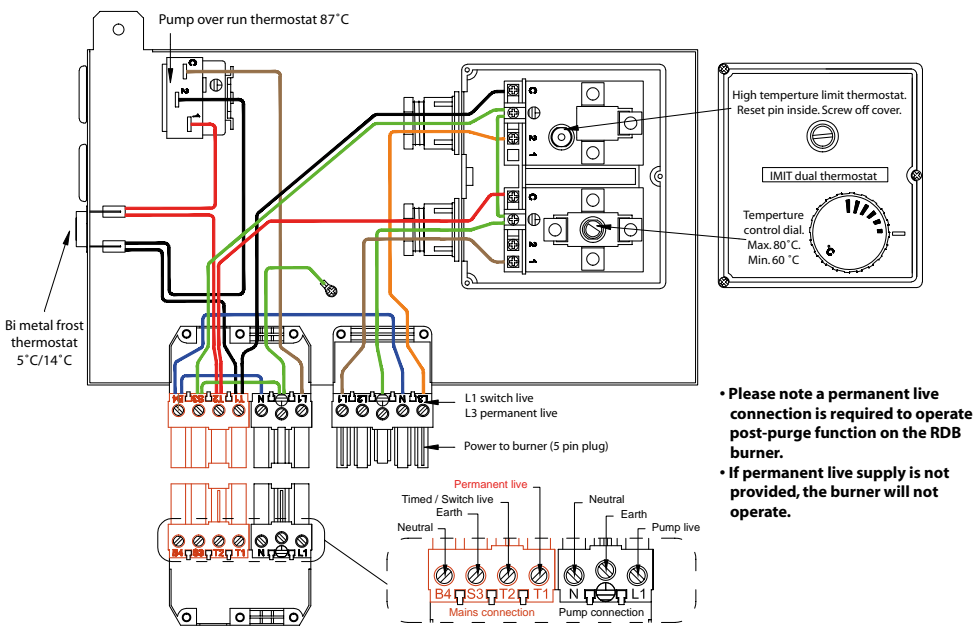

- Please note a permanent live connection is required to operate post-purge function on the RDB burner.
- If permanent live supply is not provided, the burner will not operate.

Use heat resistant cable. Protect supply with 5A fuse.

9 9.2 - SLIMLINE HEATPAC - WIRING

ELECTRICAL SUPPLY


230V 50Hz mains electric supply protected with a 5A fuse.

This appliance must be earthed.


A qualified electrician must carry out all electric wiring in accordance with current I.E.E Regulations and any local regulations which may apply.

The mains electrical supply must be taken from a double pole isolating switch with a 5A fuse, positioned somewhere close to the boiler. A heat resisting cable must be used which can be routed into the boiler through the access provided on either side of the base. Ancillary controls may be provided for with terminal connections in the control panel.

4 PIN (ANALOGUE)

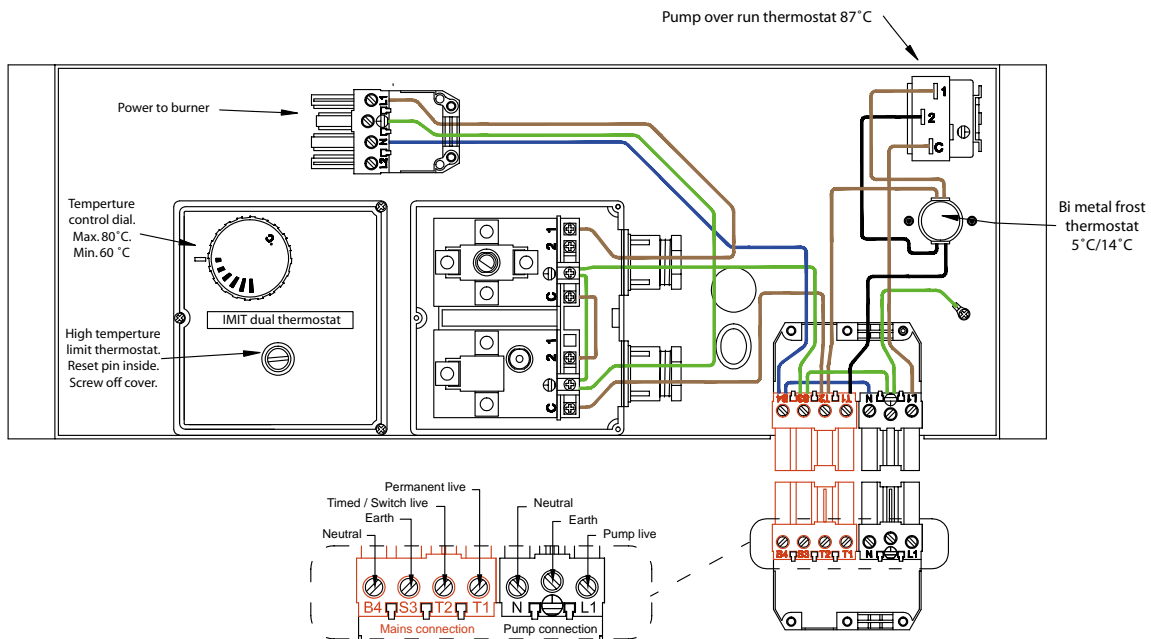

5 PIN (DIGITAL)

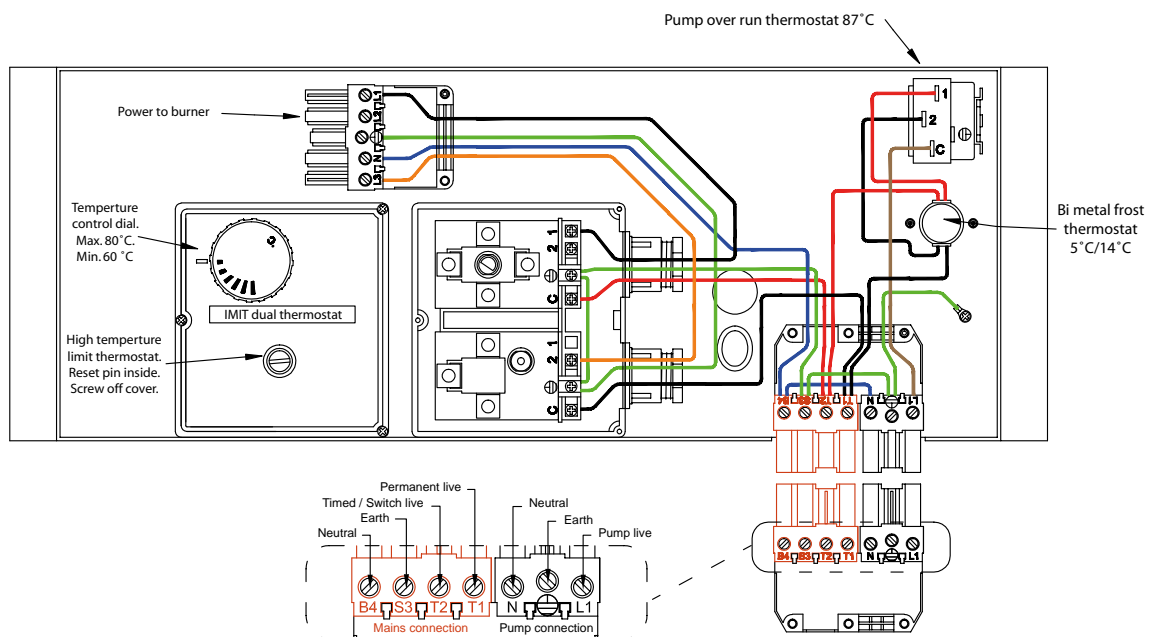

Use heat resistant cable. Protect supply with 5A fuse.

9 9.3 - POPULAR - WIRING

ELECTRICAL SUPPLY


230V 50Hz mains electric supply protected with a 5A fuse.

This appliance must be earthed.


A qualified electrician must carry out all electric wiring in accordance with current I.E.E Regulations and any local regulations which may apply.

The mains electrical supply must be taken from a double pole isolating switch with a 5A fuse, positioned somewhere close to the boiler. A heat resisting cable must be used which can be routed into the boiler through the access provided on either side of the base. Ancillary controls may be provided for with terminal connections in the control panel.

4 PIN (ANALOGUE)

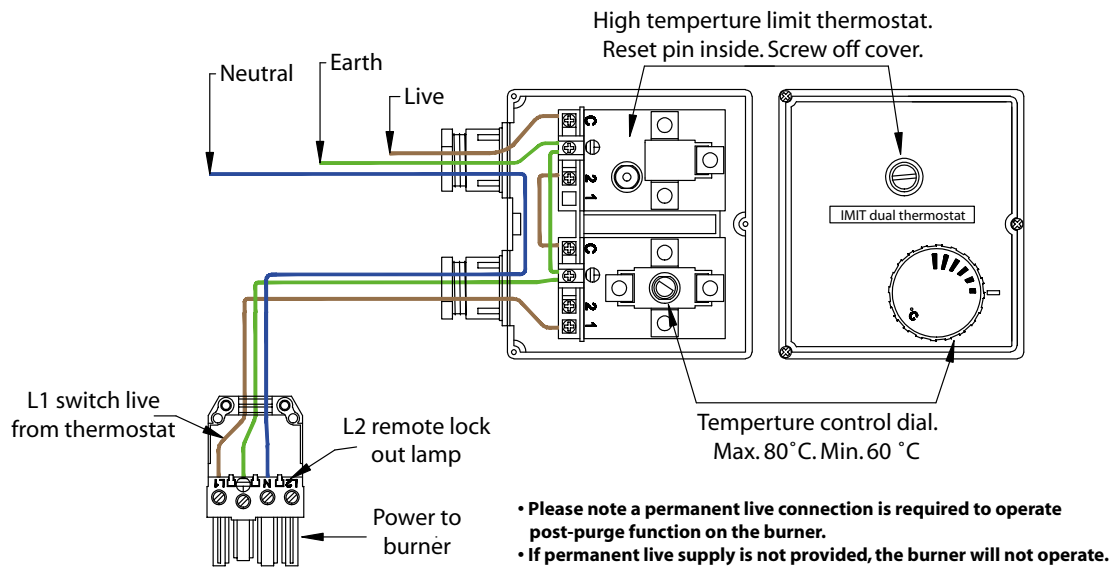

5 PIN (DIGITAL)

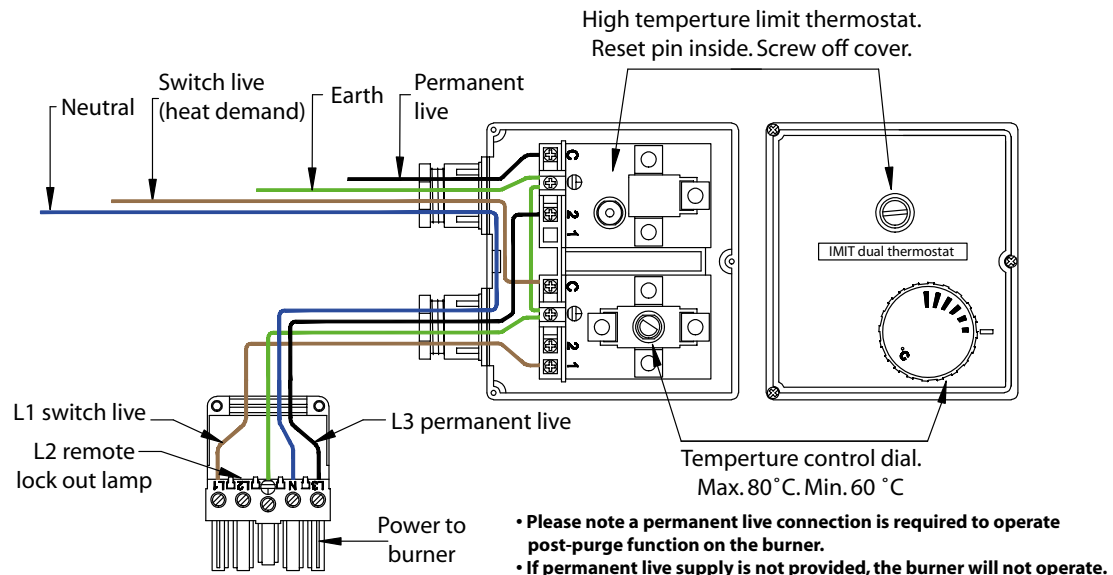

IMPORTANT

When connecting the mains supply to this unit ensure that:

- 1 Double insulated heat resistant cable is used.
- 2 No single insulated cable is exposed at connection points on the (thermostat, burner, plug and socket).
- 3 All relevant lids and covers are properly replaced and secured correctly.
- 4 A permanent power supply (not timed) should be available at boiler location.
This can be used for a frost thermostat and or an over heat thermostat, should either or both be needed.

Use heat resistant cable. Protect supply with 5A fuse.

9 9.4 - KITCHEN - WIRING

ELECTRICAL SUPPLY


230V 50Hz mains electric supply protected with a 5A fuse.

This appliance must be earthed.


A qualified electrician must carry out all electric wiring in accordance with current I.E.E Regulations and any local regulations which may apply.

The mains electrical supply must be taken from a double pole isolating switch with a 5A fuse, positioned somewhere close to the boiler. A heat resisting cable must be used which can be routed into the boiler through the access provided on either side of the base. Ancillary controls may be provided for with terminal connections in the control panel.

4 PIN (ANALOGUE)

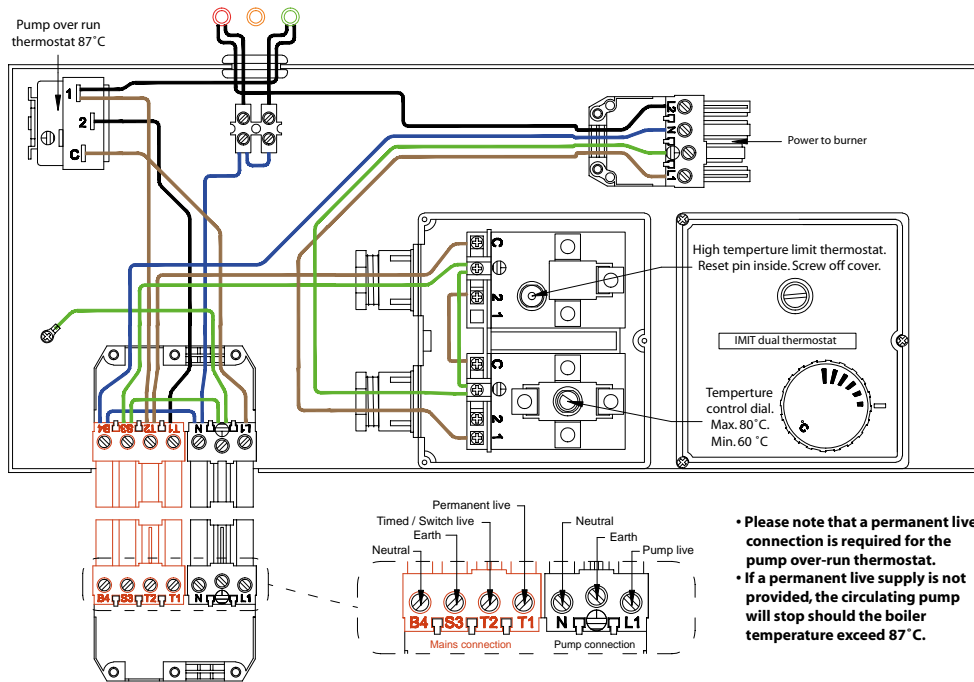

5 PIN (DIGITAL)

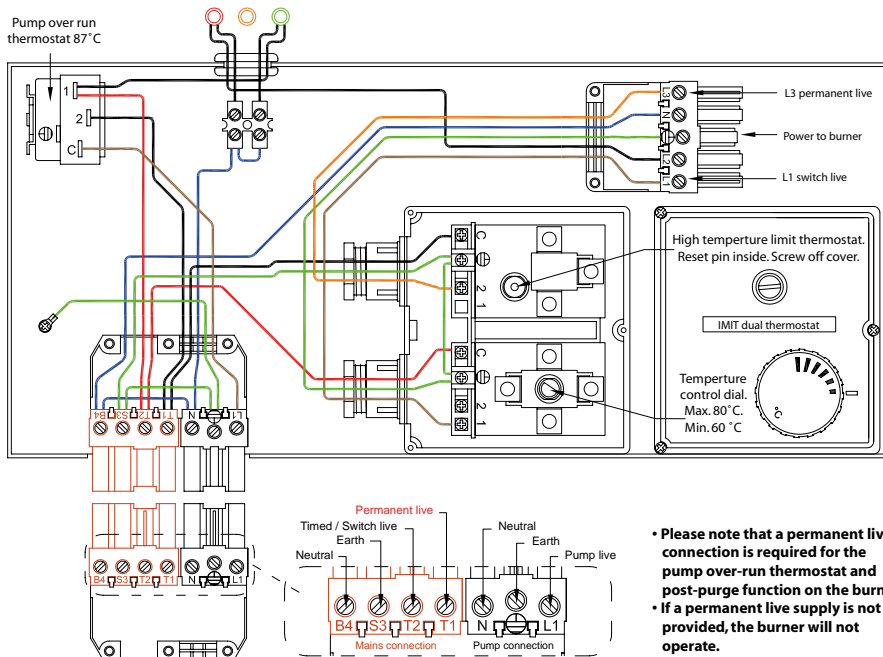

Use heat resistant cable. Protect supply with 5A fuse.

9 9.5 - KITCHEN - ELECTRONIC CONTROLLER - WIRING

ELECTRICAL SUPPLY


230V 50Hz mains electric supply protected with a 5A fuse.

This appliance must be earthed.


A qualified electrician must carry out all electric wiring in accordance with current I.E.E Regulations and any local regulations which may apply.

The mains electrical supply must be taken from a double pole isolating switch with a 5A fuse, positioned somewhere close to the boiler. A heat resisting cable must be used which can be routed into the boiler through the access provided on either side of the base. Ancillary controls may be provided for with terminal connections in the control panel.

4 PIN (ANALOGUE)

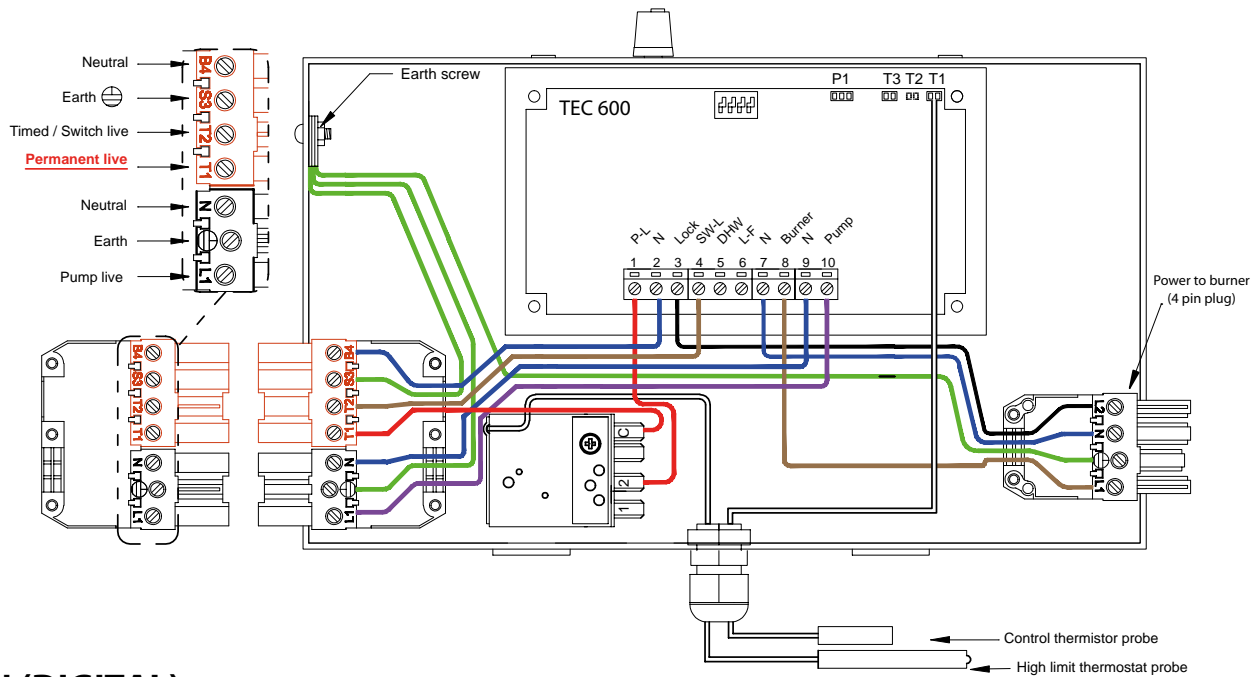

5 PIN (DIGITAL)

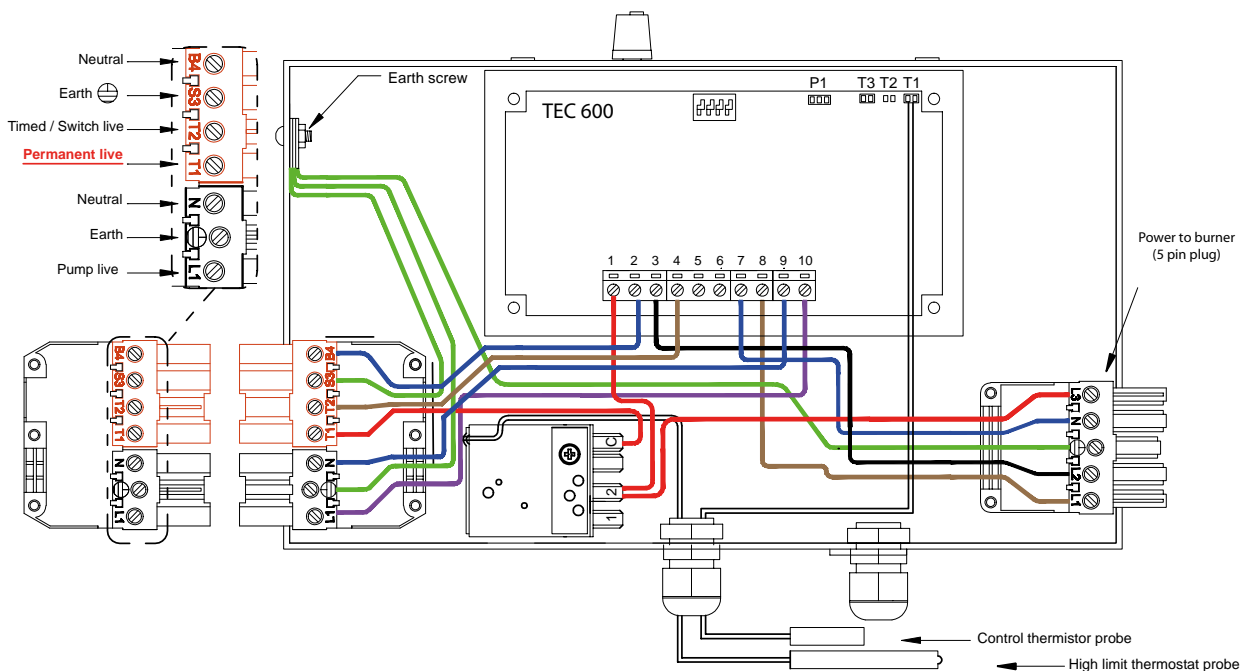

Use heat resistant cable. Protect supply with 5A fuse.

10 BURNER

The burner nozzle, pump pressure and air setting may have to be changed from the factory setting to suit site conditions.

KEROSENE SETTINGS FOR FIREBIRD BOILER RANGE USING RDB 2.2 & 4.2 BURNERS

Variations in nozzle throughput, flue type & draught, oil viscosity etc. may give results differing from the below laboratory performance figures. These settings were carried out using a conventional flue.

Model	Burner	Output kW BTU	Blast Tube	Nozzle Size - Angle - Type			Pump Pressure	Air Shutter	Comb Head	Air Box	Avg. Fg. °C	CO ₂	Smoke Bacharach	Restrictor Disc	Deflector Plate
12-18	RDB 2.2	12 41k	TO	0.4	80°	ES	7 bar	1.0	-	1	60	11-11.5%	0-1	SET 12/15	B12
		15 51k	TO	0.4	80°	ES	10 bar	2.5	-	1	60	11-11.5%	0-1	SET 12/15	B12
		18 59k	TO	0.5	80°	ES	8.5 bar	3.0	-	1	60	11-11.5%	0-1	SET 18	B12
12-20	RDB 2.2	18 59k	LD2X	0.5	80°	ES	8.5 bar	1.5	-	1	70	11.5%	0-1	C	A11
		20 68k	LD2X	0.6	80°	ES	8 bar	2.8	-	1	75	11.5%	0-1	C	A11
20-26	RDB 2.2	20 68k	T3	0.6	80°	ES	9 bar	1.8	-	1	70	11.5%	0-1	-	STD
		23 79k	T3	0.65	80°	ES	9 bar	2.5	-	1	80	11.5%	0-1	-	STD
		26 89k	T3	0.75	80°	ES	9 bar	4.0	-	1	85	11.5%	0-1	-	STD
26-35	RDB 2.2	26 89k	T3	0.75	80°	ES	9 bar	4.0	-	1	80	11.5%	0-1	-	STD
		31 104k	T3	0.85	80°	ES	9 bar	5.0	-	1	90	11.5%	0-1	-	STD
		35 120k	T3	1.00	80°	ES	8.2 bar	6.5	-	1	95	11.5%	0-1	-	STD
36-44	RDB 2.2	40 136k	LD3 slot	1.1	60°	ES	9 bar	3.3	-	2	65	11.5%	0-1	-	STD
		42 143k	LD3 slot	1.10	60°	ES	10 bar	4.0	-	2	70	11.5%	0-1	-	STD
		44 144k	LD3 slot	1.25	60°	S	7.5 bar	5.5	-	2	70	11.5%	0-1	-	STD
58	RDB 4.2	44 150k	Adj. (G5)	1.25	60°	S	8 bar	2.5	0	2	65	11.5%	0-1	-	-
		52 174k	Adj. (G5)	1.50	60°	S	7 bar	3.5	1.5	2	70	11.5%	0-1	-	-
		58 198k	Adj. (G5)	1.50	60°	S	9 bar	5.0	2	2	75	11.5%	0-1	-	-
73	RDB 4.2	58 198k	Adj. (G10)	1.50	60°	S	9 bar	5.9	1	2	65	11.5%	0-1	-	-
		66 222k	Adj. (G10)	1.75	60°	S	8.5 bar	6.0	2	2	70	11.5%	0-1	-	-
		73 249k	Adj. (G10)	1.75	60°	S	10 bar	6.5	2.5	2	80	11.5%	0-1	-	-
80-100	RDB 4.2	80 272k	Adj. (G10)	2.25	60°	S	8 bar	8.0	4	2	80	11.5%	0-1	-	C100
		90 307k	Adj. (G10)	2.50	60°	S	8 bar	8.5	6	2	80	12.5%	0-1	-	C100
		100 340k	Adj. (G10)	2.50	60°	S	9.2 bar	8.5	Max	2	80	12.5%	0-1	-	C100

The shaded line represents factory settings. These settings override those in the burner manual.

The above performance figures are based on ideal laboratory test conditions. The air shutter settings above may need to be revised to take into consideration the difference in resistances between conventional and balanced flue installations, air temperature and nozzle tolerance. Use flue gas analyzer to achieve optimum results. Danfoss ES nozzles are a Kerosene nozzle and have a tolerance of +- 5%. Danfoss S + H nozzles are a Diesel nozzle and have a tolerance of +- 15% when used with Kerosene.

SETTING THE BURNER

1. Establish the type of fuel in the oil tank.
2. Check that the nozzle type, pump pressure and air settings are as per the manual for the output required.
3. Set the thermostat to the minimum temperature and let the boiler run until it cuts out at 60°C.
4. The boiler must be at 60°C or higher before any adjustments or analysing is carried out.
By doing this, you are also ensuring the thermostat is working.
5. Increase the thermostat setting to refire the burner.
6. Wait for the CO₂ to stabilise.
7. Adjust the air and pump pressure to achieve a stable CO₂ in the region of 11.5%
(refer to graph under Commissioning & Burner Settings).
8. The fuel option on the flue gas analyser should be set to a light oil.

For burner technical details which are not covered in this manual, refer to the burner manufacturer's manual

11 TERMS & CONDITIONS OF WARRANTY

Firebird products are designed and manufactured to give many years of trouble free service.

The terms laid down in the warranty must be adhered to

- ◆ Firebird provides a comprehensive, conditional warranty of 5 years on the boiler shell and 2 years on all other parts from date of installation, provided installation has occurred within 12 months from date of purchase.
- ◆ The 5 year boiler shell warranty consists of parts and labour for the first 3 years and parts only for years 4 and 5.
- ◆ The warranty will only apply if the boiler is commissioned by an OFTEC registered or competent, qualified engineer and is serviced annually thereafter.
- ◆ Please ensure that the commissioning certificate within the Boiler Passport is fully completed by an OFTEC registered or competent, qualified engineer and is returned to Firebird within 28 days of complete installation and commissioning. The Boiler Passport is included with every boiler and can also be completed online at the following link:
<http://www.firebird.ie/index.php/boiler-passport.html>.
- ◆ Correct commissioning will ensure that your boiler is set to operate at its maximum fuel efficiency.
- ◆ Consumable components, the nozzles and the oil hose are excluded.

TERMS & CONDITIONS OF WARRANTY

1. Warranty implies that the product shall be free from defective parts or workmanship for a period of warranty cover, which begins from the date of installation.
2. All claims under the warranty programme must be within the time limits stated on the left.
3. Installation and commissioning of the product must be in accordance with (a) instruction/technical manuals (b) all relevant standards and codes of practice.
4. An OFTEC registered or competent, qualified engineer, using the correct installation and test equipment must carry out installation and commissioning.
5. This warranty does not cover special, incidental or consequential damages, injury to persons or property, or any other consequential loss.

6. Servicing of the boiler is to be carried out annually to maintain the manufacturer's warranty.
7. Firebird accepts no liability in respect of any defect arising from incorrect installation, negligence, fair wear and tear, misuse, alteration or repair by unqualified persons.
8. Firebird will not accept any liability in respect of any defect occurring to the product due to limescale build-up and or low return water temperature.
9. The warranty programme extends to reasonable labour costs EXCEPT in the case of a 5 year warranty period whereby any valid claim made after 3 years will not include labour costs.
10. Firebird's prior authorisation must be obtained before examination or repair of the product takes place.
11. Firebird will examine all claims made under the warranty programme and for any claims that are deemed invalid, the costs incurred will be borne by the owner.
12. The warranty programme only applies where the product was used for normal domestic heating purposes.
13. Any defective part removed under any or all of the warranty programmes MUST be returned to Firebird.
14. If this appliance is installed in a pressurised system, failure to correctly size the expansion vessel may damage the boiler and invalidate the warranty
15. A full set of warranty conditions and terms can be found on the Firebird website.

*STATUTORY RIGHTS OF THE OWNER ARE NOT
AFFECTED BY THIS WARRANTY*

ErP A Rated

Model Identifier	Energy efficiency class	Rated heat output kW	Seasonal Efficiency Base Model %	Annual energy consumption GJ	Sound power level dB
KITCHEN					
12-18kW	A	18	92	47	45
12-20kW	A	20	93	50	46
20-26kW	A	26	93	71	47
26-35kW	A	35	92	95	52
36-44kW	A	44	94	123	52
44-58kW	A	58	93	158	52
POPULAR					
12-18kW	A	18	92	47	52
12-20kW	A	20	93	50	54
20-26kW	A	26	93	71	55
26-35kW	A	35	92	95	59
36-44kW	A	44	94	123	59
44-58kW	A	58	93	158	60
HEATPAC or SLIMLINE HEATPAC					
12-18kW	A	18	92	47	N/A
12-20kW	A	20	93	50	N/A
20-26kW	A	26	93	71	N/A
26-35kW	A	35	92	95	N/A
36-44kW	A	44	94	123	N/A
44-58kW	A	58	93	158	N/A

FIREBIRD



HEATING SOLUTIONS

For further information on Firebird products please contact:

Firebird Heating Solutions Ltd.

Údarás Industrial Estate, Baile Mhic Íre, Co. Cork, P12 HK51, Ireland.

t: +353 (0)26 45253 f: +353 (0)26 45309

e: info@firebird.ie web: www.firebird.ie

Firebird Heating Solutions Ltd.

Shean, Forkhill, Newry, BT35 9SY.

t: +44 (0)28 3088 8330 f: +44 (0)28 3088 9096

e: firebirdproducts@hotmail.co.uk web: www.firebird.ie

Firebird Products Ltd.

Phoenix House, Eastern Wood Road, Langage Industrial Estate, Plympton,
Plymouth, Devon PL7 5ET, United Kingdom.

t: +44 (0)1752 691177 f: +44 (0)1752 691131

e: sales@firebird.uk.com web: www.firebird.uk.com

© Copyright applies to all FIREBIRD products. Our policy is one of continual development and we therefore reserve the right to change without prior notice the specification of our products at any time and be without obligation to make similar changes in products previously produced.